



Item	Order	Description	Model	OEM
1	105236	burner cover 83	HC/G	59241, 59203
2	105235	burner base	HCF/G, HCF/GE	59201, 02461
3	105237	Venturi	HTF/G	59199, 02458
4	105055	aeration sleeve		52116



Item	Order	Description	Model	OEM
1	105239	burner cover 102	HC/G	59242, 59204
2	105238	burner base	HCF/G	59202, 02462
3	105240	Venturi	HCF/GE, HTF/G	59200, 02459
4	105055	aeration sleeve		52116



Item	Order	Description	Model	OEM
1	105242	burner cover 122		59253, 59213
2	105241	burner base	HC/G	59212, 02463
3	105243	Venturi	HCF/G, HCF/GE	59211, 02460
4	105055	aeration sleeve	HTF/G	52116
5	105244	spacer		02197



Item	Order	Description	Model	OEM
1	101095	gas tap		59460, 59355, 59353, 59361, 59367, 59369
2	110348	knob	HC/G	59206
3	102205	thermocouple, 750 mm	HCF/G, HCF/GE	58332
4	100094	pilot burner	HTF/G	59214
5	100182	cover		03547



Item	Order	Description	Model	OEM
1	210146	top grate	HC/G, HCF/G, HCF/GE, HTF/G	59208, 59245, 02437
2	210001	reducing star		25056



Item	Order	Description	Model	OEM
1	104554	burner cover, 6 kW		0C0129
2	104555	burner rose	NCG	0C0127
3	104556	Venturi	NCFG, NCFGE	0C0125
4	104557	burner holder	NTFG	0C0124
5	532505	O-ring		0C0188



Item	Order	Description	Model	OEM
1	104558	burner cover, 10 kW		0C0128
2	104559	burner rose	NCG	0C0126
3	104560	Venturi	NCFG, NCFGE	0C0133
4	104557	burner holder	NTFG	0C0124
5	532505	O-ring		0C0188



Item	Order	Description	Model	OEM
1	101897	gas tap		0C0205
2	111598	knob	NCG	0C0191
3	111632	panel in the front	NCFG, NCFGE	0C0192
4	111633	panel in the back	NTFG	0C0193
5	104563	fixing		69567



Item	Order	Description	Model	OEM
1	100879	pilot burner	NCG, NCFG	0C0199
2	102035	thermocouple, 850 mm	NCFGE, NTFG	0C0202



Item	Order	Description	Model	OEM
1	100066	pilot burner		91442
2	100067	electrode	SFG 100	91443
3	100068	thermocouple, 600mm	SLG 100	91444
4	100069	interrupter, M9x1		1168
5	100070	safety thermostat		04921



Item	Order	Description	Model	OEM
1	101011	Minisit alarm valve		52535
2	101037	cover	RFR 100	52521
3	101068	knob	OR 100	54268
4	100007	piezoelectric igniter	RFG300	52530



Item	Order	Description	Model	OEM
1	100012	piezoelectric igniter	RFG 100	52522
2	100013	pilot burner		11-AT
3	100014	pilot burner, E11	RFG300	50813
3	100106	pilot burner, E11	MFR/G360	58320
4	100015	thermocouple, 1000mm		56014



Item	Order	Description	Model	OEM
1	32116	safety thermostat	RFG300, MFR/G360	16-B
2	100069	interrupter, M9x1		1168
3	100068	thermocouple, 600mm		25264



Item	Order	Description	Model	OEM
1	101437	Minisit controller		52535
2	101037	cover	RFR 100	52521
3	101068	knob	OR 100	54268



Item	Order	Description	Model	OEM
1	101023	composite valve	RR 100	11Q-1
2	101021	ignition unit, 1 output	MFR 100	53647
3	101022	ignition unit, 2 outputs	FRQJ 100	51884



Item	Order	Description	Model	OEM
1	345061	switch	1111-11, HFX/G70	52523
2	345038	button	MFR/G350, MFR/G370	53978
3	345039	hood	FRQJ 100	53979



Item	Order	Description	Model	OEM
1	JS 11j	thermostat		50412
2	JU 11j	signal element	RFR/G301	26801
3	359110	signal element	RFR/G701	53811
4	JS9 11j	lens		<11H



Item	Order	Description	Model	OEM
1	390053	thermostat	MFR/G350,	50412
2	110314	knob	MFR/G700,	58591
3	359365	signal lamp	PFRG350/700	58659



Item	Order	Description	Model	OEM
1	100836	upper part	MFR/G350, MFR/G700, MFR/G351, MFR/G701	52280
2	102662	upper part	MFR/G380, MFR/G381, PFRG381/731, CFRG40M/80M	03328
3	100855	holder	MFR/G380, MFR/G381, MFR/G350, MFR/G351, MFR/G700, MFR/G701,	52246+ 52256 52686
4	100882	lower part		
5	100706	electrode	PFRG350/381/700/731, CFRG40M/80M	59380



Item	Order	Description	Model	OEM
1	100836	upper part	RFR/G300,	52280
2	100855	holder	RFR/G700,	52246+ 52256
3	100882	lower part 0,25	RFR/G301,	52281
3	100833	lower part 0,35	MFR/G350,	52686
4	100708	electrode	MFR/G700, PFRG350/700	52610



Item	Order	Description	Model	OEM
1	102250	thermocouple with interrupter	MFR/G380, MFR/G381, PFRG381/731	56914
2	102070	thermocouple with interrupter	MFR/G350, MFR/G351, MFR/G700, MFR/G701, PFRG350/700, CFRG40M/80M	54055
3	390509	safety thermostat	MFR/G , PFRG , CFRG	03329



Item	Order	Description	Model	OEM
1	102250	thermocouple with interrupter	RFR/G300,	56914
			RFR/G700	51932
2	102070	thermocouple with interrupter	RFR/G301, RFR/G701, MFR/G350, MFR/G700, PFRG350/700	54055
3	375108	safety thermostat	RFR/G , MFR/G350, MFR/G700, PFRG350/700	52531



Item	Order	Description	Model	OEM
1	101187	Novasit gas valve (mV)		02606
2	101800	extension		02604
3	111656	knob	MFR/G740	02603
4	100012	piezoelectric igniter	PFRG740	02605
5	101339	covering hood		02816



Item	Order	Description	Model	OEM
1	101188	Eurosit controller	MFR/G380, MFR/G381,	03334
2	110358	adapter	MFR/G350, MFR/G351,	03391
3	110282	knob	MFR/G700, MFR/G701,	03292
4	100012	piezoelectric igniter	PFRG350/381/700/731, CFRG40M/80M	02605
5	101339	covering hood		02816



Item	Order	Description	Model	OEM
1	375583	thermostat		02602
2	110314	knob	MFR/G740	58591
3	375108	safety thermostat	PFRG740	52331



Item	Order	Description	Model	OEM
1	102816	upper part		03394
2	100855	holder	MFR/G740 PFR/G740	52246+52256
3	100883	lower part		52686
4	100708	electrode		52610



Item	Order	Description	Model	OEM
1	102070	thermocouple	MFR/G740	54055
2	102116	pilot generator	PFR/G740	02607



Item	Order	Description	Model	OEM
1	101127	Electrosit gas valve	HFR/G420/421/840,	57543
2	101309	extension	HFR/G420D/840D	51281
3	111657	panel	HFR/G420/421/840	52272
4	111658	panel	HFR/G420D7-/40D	53105



Item	Order	Description	Model	OEM
1	359151	signal lamp	HFR/G_	53148, 53154
2	359152	signal lamp	HFR/G420/421/840	53149, 53155
3	345985	switch	HFR/G_D	53810



Item	Order	Description	Model	OEM
1	390049	thermostat	HFR/G_	52330
2	390056	thermostat	HFR/G_D	51361
3	110046	knob		26915



Item	Order	Description	Model	OEM
1	375108	safety thermostat		52331
2	101002	ignition unit	HFR/G420/421/840, HFR/G420D/840D	53647, 51884
3	102250	thermocouple		51632, 56914



Item	Order	Description	Model	OEM
1	100836	upper part		52280
2	100855	holder	HFR/G420 HFR/G421	52246+52256
3	100882	lower part 0,25	HFR/G840	52281
3	100883	lower part 0,35	HFR/G420D HFR/G840D	52686
4	100708	electrode		52610



Sa 820051

Item	Order	Description	Model	OEM
1	101956	Novasit gas valve	HFR/G410-412,	02903
2	101928	adapter	HFR/G810, HFR/G410D	59305
3	111534	knob	HFR/G810D	59304
4	101312	micro switch	HFR/G430, HFR/G435	54539
5	111646	knob	NFR/G430/435/440	03704



Item	Order	Description	Model	OEM
1	101979	gas regulator		06574
2	111660	knob	HFR/G430 HFR/G830	06570
3	375585	safety thermostat	HFRS/G430	06282
4	102070	thermocouple		54055



Item	Order	Description	Model	OEM
1	101982	gas regulator		0C0624
2	111661	panel	NFR/G400/800	0C0623
3	111614	knob	NFR/G420/820	0C0189
4	111615	knob		0C0190



Item	Order	Description	Model	OEM
1	102664	upper part		59301
2	100855	holder	HFR/G410-412	52246+52256
3	100883	lower part 0,35	HFR/G410D	25686
4	100708	electrode	HFR/G810D	52610



Item	Order	Description	Model	OEM
1	375585	safety thermostat	NFR/G400/800	06282
2	102070	thermocouple	NFR/G420/820	54055



Item	Order	Description	Model	OEM
1	379567	electronic thermostat		06154
2	379924	sensor	HFH/G430	06155
3	380380	time relay		06156



 
Item	Order	Description	Model	OEM
1	375584	thermostat	HFR/G410-412, HFR/G810	03049
2	390049	thermostat	HFR/G410D, HFR/G810D	52330
3	111659	knob	HFR/G410-412,	59303
4	359364	signal lamp/green	HFR/G810,	05010
5	359365	signal lamp/yellow	HFR/G410D	05011




Item	Order	Description	Model	OEM
1	301216	switch		59544
2	300001	switch	HFH/G430	A2036
3	111662	knob		06144
4	359364	signal lamp/green		05010
5	359365	signal lamp/yellow		05011



Item	Order	Description	Model	OEM
1	375586	safety thermostat	HFR/G410-412, HFR/G810	A5435
2	375108	safety thermostat	HFR/G410D, HFR/G810D	52331
3	102070	thermocouple	HFR/G410-412, HFR/G810	54055
4	101002	ignition unit	HFR/G410D,	033076
			HFR/G810D	51884

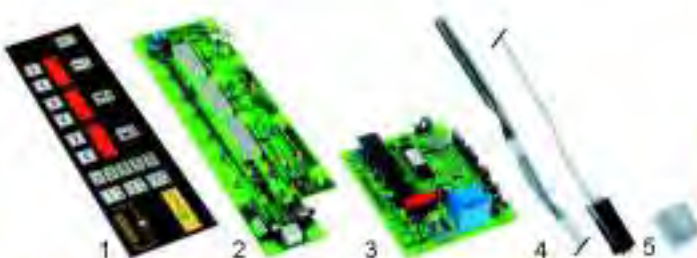

Item	Order	Description	Model	OEM
1	400994	fascia		06608
2	400741	control p.c.b.		06644
3	400996	main p.c.b.	HFH/G435	06624
4	379918	scissor		06609
5	400997	button		02670

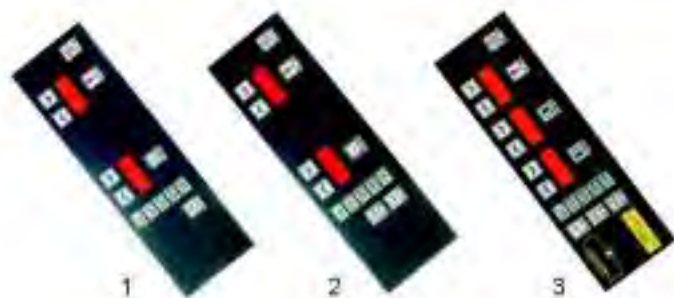 

Item	Order	Description	Model	OEM
1	400998	fascia	NFRG430	0C1015
2	400999	fascia	NFRG435	0C1016
3	400994	fascia	NFRG440	06608



Item	Order	Description	Model	OEM
1	400741	control p.c.b.		06803
2	400996	main p.c.b.	NFRG430	06624
3	379918	sensor	NFRG430	06609
4	400997	button	NFRG440	02670



Item	Order	Description	Model	OEM
1	379395	transformer	HFH/G430	06159
2	379396	rectifier	HFH/G435	06147
3	380636	relay	NFRG430	56510
4	601130	fan	NFRG435	06125



Item	Order	Description	Model	OEM
1	345254	micro switch	HFH/G430	53671
2	375585	safety thermostat	HFH/G435	06282
3	101002	ignition unit	NFRG430	04240
4	102070	thermocouple	NFRG435	54055



Item	Order	Description	Model	OEM
1	102665	upper part	HFH/G430, HFH/G435	06128
2	100855	holder	HFR/G430, HFR/G830	52246+52556
3	100880	lower part	HFRS-G430	06725
4	100708	electrode	NFRG430/440/450	59380



Item	Order	Description	Model	OEM
1	102663	upper part		A5441
2	100855	holder	NFRG400-800	52246+52556
3	100880	lower part		06725
4	100708	electrode		59380

Fryers (electric)




Item	Order	Description	Model	OEM
1	415291	2000 W/230 V	SFRE350/700	04926
2	415354	1500 W/230 V	RFR/E302, RFR/E312, MFR/E370	54951, 58612
3	415274	3000 W/230 V	RFR/E305, RFR/E701, RFR/E315, RFR/E711, MFR/E350, MFR/E700	54962, 58615



Item	Order	Description	Model	OEM
1	416992	9500 W/230 V	MFR/E305, MFR/E306, MFR/E705, MFR/E706, MFR/E740	54923
2	416993	1500 W/230 V	MF/1D05, PFRE370	04752
3	416994	2900 W/230 V	MF/E1S12, MF/E2D12, PFRE350/700	05964



Item	Order	Description	Model	OEM
1	416995	2900 W/230V	MFR/E1512, MFR/E2D12, PRFE360/700	A5565
2	416996	2900 W/230V	MFR/E2S40, PRFE740	04767
3	416997	4000 W/230V	HFR/E420, HFR/E840	52326, 52327

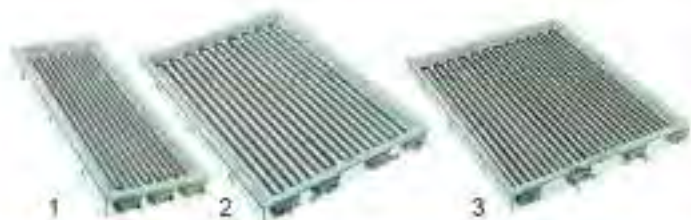 

Item	Order	Description	Model	OEM
1	416998	2700 W/230V	MF/E1S08, MF/E2D08, MF/E1S07, MF/E2D07, PRFE381/731E, MFR/E1S07, MFR/E1S08, MFR/E2D07, MFR/E2D08, PRFE381/731	04755
2	416999	5000 W/230V	MFR/E1S14, MFR/E2D14, PRFE355/705, NFR/E400/800	05942
3	418000	5000 W/400V	HFH/E430, HFH/E435, HFR/E430, HFR/830, NFR/E420/820, NFR/E430/435/440	06158



Item	Order	Description	Model	OEM
1	418001	5000 W/230V	HFR/E421	54650
2	415377	5500 W/230V	HFR/E410-412/HFR/E418/810/818	59563
3	418002	5500 W/230V	HFR/E431/831, NFR/E410/810	06571



Item	Order	Description	Model	OEM
1	390056	thermostat		04925
2	300001	switch	SFRE350 SFRE700	04908
3	110715	knob		04924



Item	Order	Description	Model	OEM
1	390113	safety thermostat		04923
2	345127	micro switch		04927
3	359132	signal element/green	SFRE350	04895
3	359130	signal element/yellow	SFRE700	-
4	359123	insert lamp holder/green		04896
5	359124	insert lamp holder/yellow		04928



Item	Order	Description	Model	OEM
1	390056	thermostat		51361
2	111617	knob	RFR/E302, RFR/E305, RFR/E701, RFR/E312	53867
3	300102	switch	RFR/E315, RFR/E711	50857
4	111638	knob		26797



Item	Order	Description	Model	OEM
1	375641	safety thermostat		54932
2	345254	micro switch		53671
3	380204	contactor	RFR/E302, RFR/ E305	75796
4	359110	signal element/yellow	RFR/E701, RFR/ E512	53811
4	359109	signal element/green	RFR/E315, RFR/E711	54150
5	359804	lens/yellow		53812
6	359803	lens/green		54151



Item	Order	Description	Model	OEM
1	390052	thermostat	MFR/E350	52330
2	110314	knob	MFR/E370	58591
3	375641	safety thermostat	MFR/E700	54932



Item	Order	Description	Model	OEM
1	345254	micro switch		53671
2	380204	contactor	MFR/E350, MFR/E370	75796
3	359364	signal lamp/green	MFR/E700	58658
4	359365	signal lamp/yellow		58659



Item	Order	Description	Model	OEM
1	390052	thermostat	MF/E1D05, MF/E1S12,	52330
2	111664	knob	MF/E2D12, MFR/E1S12,	04783
3	111659	knob	MFR/E2D12, MFR/E2S40,	59303
4	375578	safety thermostat	PFRE370/350/700/360/710/740	04472



Item	Order	Description	Model	OEM
1	390056	thermostat		51361
2	111663	knob	MFR/E355, MFR/E705	59196
3	300102	switch		50857
4	110315	knob		58629



Item	Order	Description	Model	OEM
1	345032	micro switch	MF/E1D05, MF/E1S12,	02785
2	380204	contactor	MF/E2D12, MFR/E1S12,	82986
3	359364	signal lamp/green	MFR/E2D12, MFR/E2S40,	05010
4	359365	signal lamp/yellow	PFRE370/350/700/360/710/740	05011



Item	Order	Description	Model	OEM
1	390052	thermostat	MFR/E740	52330
2	110314	knob		58591




Item	Order	Description	Model	OEM
1	375576	thermostat	MF/E1S07, MF/E2D07,	05940
2	300001	switch	MFR/E1S07, MFR/E2D07, MFR/E1S14, MFR/E2D14,	A2036
3	111659	knob	PFRE381T/731T/381/731/355/705	59303



Item	Order	Description	Model	OEM
1	390087	safety thermostat	MFR/E355,	51369
2	359364	signal lamp/green	MFR/E705, MFR/E740	58658
3	359365	signal lamp/yellow		58659
4	345032	micro switch		02785
5	380637	contactor		54928



Item	Order	Description	Model	OEM
1	375580	safety thermostat	MF/E1S07, MF/E2D07,	05941
2	359364	signal lamp/green	MFR/E1S07, MFR/E2D07, MFR/E1S14, MFR/E2D14,	05010
3	359365	signal lamp/yellow	PFRE381T/731T/381/731/ 355/705	05011

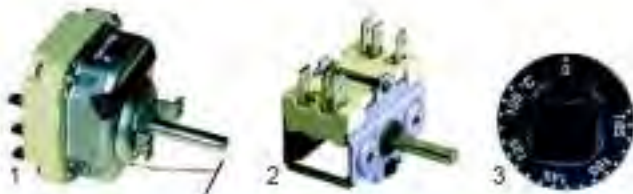 

Item	Order	Description	Model	OEM
1	390056	thermostat		51361
2	500001	switch	MF/E1S08, MF/E2D08, MFR/E1S08, MFR/E2D02	A2036
3	111664	knob		04783



Item	Order	Description	Model	OEM
1	350071	timer		54504
2	345038	push button	HFR/G421	53978
3	345059	hood		53979
4	359110	signal lamp		53811
5	359804	lamp		53812



Item	Order	Description	Model	OEM
1	390309	safety thermostat		03329
2	380204	contactor	MF/E1S08, MF/E2D08, MFR/E1S08, MFR/E2D02	82986
3	359364	signal lamp/green		05010
4	359365	signal lamp/yellow		05011



Item	Order	Description	Model	OEM
1	390052	thermostat		52330
2	111659	knob	HFR/E410-412, HFR/E810, HFR/E418, HFR/E818	59503
3	375578	safety thermostat	HFR/E430, HFR/E830	04472
4	359364	signal lamp/green	HFRS/E430-431, HFRS/E831	05010
5	359365	signal lamp/yellow		05011



Item	Order	Description	Model	OEM
1	390052	thermostat	HFR/E420,	52330
2	110046	knob	HFR/E421, HFR/E840	26915
3	390087	safety thermostat		51369



Item	Order	Description	Model	OEM
1	345254	micro switch	HFR/E410-412, HFR/E810, HFR/E418, HFR/E818	53671
2	380244	contactor	HFR/E410-412, HFR/E810	03598
3	380637	contactor	HFR/E418, HFR/E818, HFR/ E430, HFR/E830, HFRS/E430-431, HFRS/E831	54928
4	601130	fan	HFR/E430, HFR/E830, HFRS/E430-431, HFRS/E831	06125



Item	Order	Description	Model	OEM
1	345254	micro switch		53671
2	380637	contactor	HFR/E420, HFR/E421	54928
3	359151	signal lamp/green	HFR/E840	53148
4	359152	signal lamp/yellow		53149



Item	Order	Description	Model	OEM
1	390052	thermostat		52330
2	111665	panel	NFRE400/410/420, NFRE800/810/820	0C0615
3	111602	knob		0C0257



Item	Order	Description	Model	OEM
1	379567	electronic thermostat	HFUE430	06154
2	379924	sensor		06155




Item	Order	Description	Model	OEM
1	375580	safety thermostat		05941
2	359364	signal lamp/green	NFRE400/420, NFRE800/820	05010
3	359365	signal lamp/yellow		05011



Item	Order	Description	Model	OEM
1	301216	switch		59544
2	300001	switch		A2036
3	111662	knob	HFUE430	06144
4	359364	signal lamp/green		05010
5	359365	signal lamp/yellow		05011




Item	Order	Description	Model	OEM
1	375578	safety thermostat		04472
2	345254	micro switch	NFRE410/810	53671
3	359364	signal lamp/green		05010
4	359365	signal lamp/yellow		05011

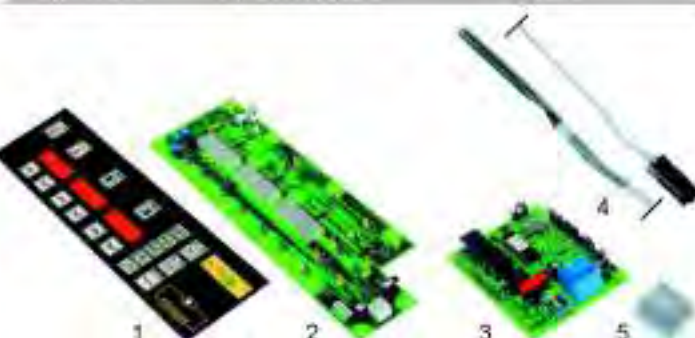 

Item	Order	Description	Model	OEM
1	400994	fascia		06608
2	400741	control p.c.b.	HFUE435	06644
3	400996	main p.c.b.		06624
4	379918	sensor		06609
5	400997	button		02670




Item	Order	Description	Model	OEM
1	380261	contactor	NFRE400/800	06879
2	380265	contactor	NFRE420/820/410/810	07080
3	601130	fan	NFRE420/820	06125

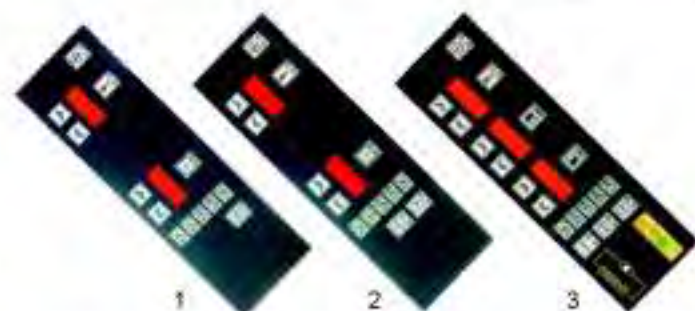 

Item	Order	Description	Model	OEM
1	400998	fascia	NFRE430	0C1015
2	400999	fascia	NFRE435	0C1016
3	400994	fascia	NFRE440	06608

 Fryers (mechanical)

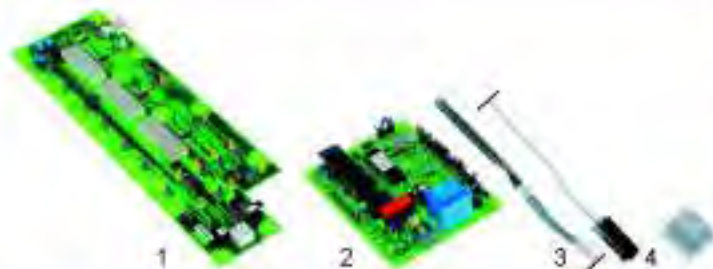

Item	Order	Description	Model	OEM
1	400741	control p.c.b.		06803
2	400996	main p.c.b.	NFRE430 NFRE435	06624
3	379918	sensor	NFRE440	06609
4	400997	push button		02670



Item	Order	Description	Model	OEM
1	379395	transformer		06159
2	379396	rectifier	HFHE430, HFH435, NFRE430/435/440	06147
3	380636	relay		56510



Item	Order	Description	Model	OEM
1	601150	fan		06125
2	345254	micro switch	HFHE430, HFH435, NFRE430/435/440	53671
3	375585	safety thermostat		06282



Item	Order	Description	Model	OEM
1	380637	contactor	HFHE430	06157
2	380204	contactor	HFHE435	82986
3	380261	contactor	NFRE430/435/440	06879



Item	Order	Description	Model	OEM
1	540259	drain tap		05667
2	514006	drain pipe	SFRG	05678
3	514027	lever	SFRE	-
4	110704	handle		04906



Item	Order	Description	Model	OEM
1	540972	drain tap	MFR/G (Stand), RFR/G (Stand), HFR/	53108
2	n. l. a.	drain tap	RFR/E (table)	55027
3	540974	drain tap	RFR/E (Stand)	54945



Item	Order	Description	Model	OEM
1	540975	drain tap	MFR/ (table)	58610
2	540963	drain tube	MF/ (table) PFR/ (table)	02457
3	540976	extension	MF/ (table) PFR/ (table)	04505



Item	Order	Description	Model	OEM
1	540977	drain tap	MFR/ (Stand)	56114
2	540978	support plate	PFR/ (Stand)	03378
3	540979	handle	HFR/G	03377



Item	Order	Description	Model	OEM
1	540980	drain tap	MF/ (table), PFR (table)	05948
2	540981	drain tap	MFR (Stand), PFR (Stand)	04486
3	540982	drain tap	MFR (Stand), PFR (Stand)	05927



Item	Order	Description	Model	OEM
1	540983	drain tap	MFR/ S40, PFR/ 740; HFRE431/831	A5439
2	540986	drain tap		06688
3	540678	handle	HFH	06689



Item	Order	Description	Model	OEM
1	540986	drain tap	HFR/ 430, HFR/ 830	06123
2	540987	handle	HFRS/ 430	06142



Item	Order	Description	Model	OEM
1	540977	drain tap		56114
2	540978	support plate	HFR/E410-412, HFR/E810	03378
3	540988	extension		59318
4	111666	knob		10142



Item	Order	Description	Model	OEM
1	693396	gasket	universal	57402
2	693397	glass		57400
3	693398	housing		57382



Item	Order	Description	Model	OEM
1	550138	capillary clamp		52262
2	550540	sensor clamp	universal	52946
3	550403	sensor clamp		56330
4	550402	sensor clamp		52248



Item	Order	Description	Model	OEM
1	970139	270 x 210 x 100mm	SFR/	05704
2	970141	285 x 115 x 100mm	RFR/G (table), MFR/G (table)	26820
3	970404	260 x 270 x 160mm	PRFR/G (Stand), MFR/	52683



Item	Order	Description	Model	OEM
1	970140	320 x 100 x 120mm	RFR (5L), MFR/E (5L), MF/E (5L), PFR/E370	54048
2	970143	320 x 225 x 120mm	RFR/E, MER/ (7L)	54060
3	970404	260 x 270 x 160mm	MFR/ (15L)	52683



Item	Order	Description	Model	OEM
1	970406	305 x 225 x 90mm	MF/ (7L/8L), PFR	04492
2	970407	260 x 270 x 120mm	MF/ (12L), PFR	04499
3	970408	325 x 225 x 120mm	MF/ (15L), PFR, NFR	05933



Item	Order	Description	Model	OEM
1	970143	320 x 225 x 120mm	MF/E (12L -heating outer), PFER	54060
2	970144	340 x 160 x 160mm	MFR/ 420/421/820	52290
3	970410	325 x 225 x 90mm	CFRG	003206



Item	Order	Description	Model	OEM
1	970145	330 x 160 x 120mm	HFR/ 410-412	59527
2	970411	340 x 335 x 120mm	HFR/ 810	59507



Item	Order	Description	Model	OEM
1	970412	330 x 135 x 140mm	HFF/ , HFR/ 430,	06133
2	970413	330 x 285 x 140mm	HFR/ 830, HFRS/ , NFR	06539

Tilting bratt pans (gas)



Item	Order	Description	Model	OEM
1	105646	burner	RBR/G, MBR/G	56796
2	105647	burner	MB/ G2, PBRG700/701	04353



Pos.	Order	Description	Model	OEM
1	105648	burner	HBR/G803-804, HBR/G820/825	51296
2	105649	burner	HBR/G1003/1004/1013	51297



Pos.	Order	Description	Model	OEM
1	105650	burner	HBR/G800-801, HBR/G805-806	A5166
2	105651	burner	HBR/G810-811, HBR/G815-816	51624



Pos.	Order	Description	Model	OEM
1	105652	burner	NBR/G800/810	0C0700
2	105653	burner	NBR/G815/820	0C0701



Item	Order	Description	Model	OEM
1	101132	Miasit controller		56833
2	101136	cover with piezoelectric igniter	RBR/G MBR/G	54269
3	110058	knob		54268



Item	Order	Description	Model	OEM
1	375579	safety thermostat		03594
2	100012	piezoelectric igniter	MB/_/G PBRG700/701	02605
3	101339	hood		02816



Item	Order	Description	Model	OEM
1	100044	pilot burner		27073
2	100706	electrode	RBR/G	56754
3	102045	thermocouple, 1500mm	MBR/G	56840, 52814
4	100026	ignition cable, 1000mm		54273



Item	Order	Description	Model	OEM
1	10207	thermocouple		54055
2	100050	pilot burner	MB/_/G PBRG700/701	59379
3	100701	electrode		53380



Item	Order	Description	Model	OEM
1	102250	thermocouple with interrupter	MBGR/G	56914
2	375572	safety thermostat	(from Nr.534...)	53980



Item	Order	Description	Model	OEM
1	101127	Elettrosit gas valve	HBR/G803-804,	57543
2	111668	panel	HBR/G1003,	51280
3	101309	extension	HBR/G1004,	51281
4	101312	micro switch	HBR/G1013	54539



Item	Order	Description	Model	OEM
1	101409	Eurosit controller		58772
2	110358	adapter	MB/_/G PBRG700/701	03391
3	111667	knob		04482



Item	Order	Description	Model	OEM
1	101002	ignition unit	HBR/G803-804,	51884
2	100052	pilot burner	HBR/G1003,	57411
3	100701	electrode	HBR/G1004,	52610



Item	Order	Beschreibung	Model	OEM
1	375572	safety thermostat	HBR/G803-804	53980
2	102041	thermocouple, 600 mm	HBR/G1003, HBR/G1004	57781
3	101265	interrupter	HBR/G1013	
4	375163	safety thermostat	HBR/G_D	51643
5	102250	thermocouple		51932, 56914



Item	Order	Description	Model	OEM
1	350156	thermostat	HBR/G803-804	51360
2	110046	knob	HBR/G1003, HBR/G1004	26915
3	300020	switch	HBR/G1013	28390
4	110043	knob		50341



Item	Order	Description	Model	OEM
1	345254	micro switch	HBR/G803-804	53671
2	359151	signal lamp/green	HBR/G1003	53148
3	359152	signal lamp/yellow	HBR/G1004	53149
4	359150	signal lamp/red	HBR/G1013	53150



Item	Order	Description	Model	OEM
1	345038	switch	HBR/G	58274
2	345039	hood	(from 2.91)	53979
3	373017	solenoid valve		55132



Item	Order	Description	Model	OEM
1	101967	Novasit gas valve	HBR/G800-801	59475
2	102340	ignition control module	HBR/G805-806	A5167
3	541335	pressure switch	HBR/G815-816	54540



Item	Order	Description	Model	OEM
1	102169	electrode		A5168
2	102170	electrode		A5169
3	375572	safety thermostat	HBR/G800-801, HBR/G805-806	53980
4	359364	signal lamp/green	HBR/G810-811, HBR/G815-816	58658
5	359365	signal lamp/yellow		58659
6	359366	signal lamp/red		58712



Item	Order	Description	Model	OEM
1	375581	thermostat	HBR/G800-801	02109
2	111669	knob	HBR/G805-806	59468
3	380015	energy regulator	HBR/G810-811	55016
4	111670	knob	HBR/G815-816	59469



Item	Order	Description	Model	OEM
1	101956	Novasit gas valve	NBRG800-800H	02905
2	101799	adaptor	NBRG810-810H	04667
3	111631	knob	NBRG815-815H NBRG820-820H	0C0465



Item	Order	Description	Model	OEM
1	100050	pilot burner	NBRG800/800E1	59379
2	100701	electrode	NBRG810/810E1	59380
3	102041	thermocouple, 600mm	NBRG820/820E1	025051
4	101002	ignition unit		03376



Item	Order	Description	Model	OEM
1	375581	thermostat	NBRG800/800E1	02109
2	111620	panel	NBRG810/810E1	0C0258
3	111602	knob	NBRG820/820E1	0C0257



Item	Order	Description	Model	OEM
1	380015	energy regulator	NBRG800/800E1	55016
2	111609	panel	NBRG810/810E1	0C0318
3	111602	knob	NBRG820/820E1	0C0257



Item	Order	Description	Model	OEM
1	375565	safety thermostat	NBRG800/800E1	0C0270
2	345254	micro switch	NBRG810/810E1	53671
3	370015	solenoid valve	NBRG820/820E1	0C0688



Item	Order	Description	Model	OEM
1	345038	switch		58274
2	345039	hood	NBRG800/800E1	53979
3	359145	signal element green	NBRG810/810E1	05010
4	359146	signal element yellow	NBRG815/815E1	05011
5	359144	signal element red	NBRG820/820E1	0C0687



Item	Order	Description	Model	OEM
1	101187	Novasit gas valve mV	HBR/G800-801	02006
2	110358	adapter	HBR/G805-806	59305
3	111534	knob	HBR/G810-811	59304



Item	Order	Description	Model	OEM
1	100110	pilot burner	HBR/G800-801	02783
2	102116	pilot generator	HBR/G805-806	02607
3	100701	electrode	HBR/G810-811	59380



Item	Order	Description	Model	OEM
1	102252	thermocouple	HBR/G800-801	02784
2	100012	piezoelectric igniter	HBR/G805-806	02605
3	101339	covering hood	HBR/G815-816	02816



Item	Order	Description	Model	OEM
1	375572	safety thermostat	HBR/G800-801, HBR/G805-806, HBR/G810-811, HBR/G815-816	53980
2	359364	signal lamp		05010



Item	Order	Description	Model	OEM
1	375581	thermostat	HBR/G800-801, HBR/G805-806, HBR/G810-811, HBR/G815-816	02109
2	111669	knob		59468
3	380015	energy regulator		55016
4	111670	knob		59469



Item	Order	Description	Model	OEM
1	101956	Nivasit gas valve		02903
2	101928	adapter	HBR/G820, HBR/G825	59305
3	111534	knob		59304
4	101312	micro switch		54539



Item	Order	Description	Model	OEM
1	100052	pilot burner		57411
2	100701	electrode	HBR/G820, HBR/G825	52610
3	102250	thermocouple with interrupter		56914
4	101002	ignition unit		03376




Item	Order	Description	Model	OEM
1	375581	thermostat		02109
2	111671	knob	HBR/G820, HBR/G825	02104
3	375163	safety thermostat		51643
4	359364	signal lamp/green		58658
5	359365	signal lamp/yellow		58659




Item	Order	Description	Model	OEM
1	345038	switch		58274
2	345039	hood	HBR/G820, HBR/G825	53979
3	345254	micro switch		53671
4	373017	solenoid valve		55132

 Tilting bratt pans (electric)

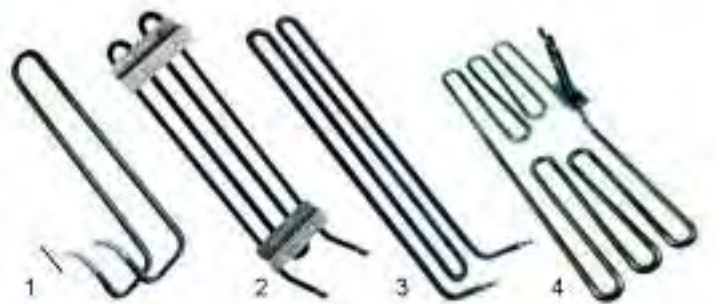

Item	Order	Description	Model	OEM
1	415098	1500 W/230 V	RBR/E700	A2068
2	415273	1500 W/230 V	MBR/E7	58345 58349
3	418016	1500 W/230 V	MBK/E7 (2nd generation)	02559
4	418003	3000 W/230 V	MBR/E2 MBK/E2 PBRE70	04469

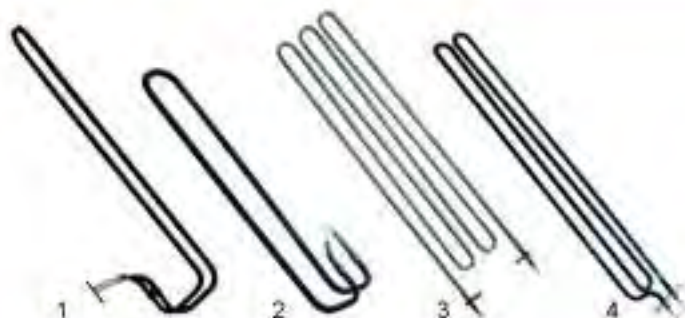 

Item	Order	Description	Model	OEM
1	415381	1500W/230V	HBR/E803, HBR/E804, HBR/E820, HBR/E825, HBR/E1003, HBR/E1013	51355
2	418004	1500W/230V	HBR/E801	51356
3	415184	2200W/230V	HBR/E800, HBR/E805, HBR/E810-811, HBR/E815-816	59401
4	418005	2500W/230V	NBRE800, NBRE810, NBRE815, NBRE820	0C0685



Item	Order	Description	Model	OEM
1	300074	switch		A2162
2	111638	knob	RBR/E	26797
3	359109	signal element		54150
4	359803	lens		54151



Item	Order	Description	Model	OEM
1	375642	thermostat		A2012
2	111617	knob	RBR/E	52867
3	346362	micro switch		A2145, A2194, 58344



Item	Order	Description	Model	OEM
1	300129	switch		A2227
2	111672	knob	RBR/E	56871
3	370016	solenoid valve		47529



Item	Order	Description	Model	OEM
1	300074	switch		A2162
2	110315	knob	MBR/E700-701, MBR/E706, MBR/E710-711, MBR/E716	58629
3	359364	signal lamp		58658



Item	Order	Description	Model	OEM
1	390156	thermostat		51360
2	111675	knob	MBR/E700-701, MBR/E706,	02374
3	346362	micro switch	MBR/E710-711, MBR/E716	58344
4	375571	safety thermostat		51454



Item	Order	Description	Model	OEM
1	300129	switch		A2227
2	111674	knob	MBR/E700-701, MBR/E706, MBR/E710-711, MBR/E716	58630
3	370339	solenoid valve		55350



Item	Order	Description	Model	OEM
1	375581	thermostat		02109
2	110447	knob		59403
3	359364	signal lamp/green	MBR/E2, MBK/E2	05010
4	359365	signal lamp/yellow	PBR370	05011



Item	Order	Description	Model	OEM
1	375562	safety thermostat	MBR/E2...	04269
2	345254	micro switch	MBR/E2...	53671
3	380244	contactor	PBR/E70...	03598



Item	Order	Description	Model	OEM
1	300102	switch		50857
2	110043	knob	MBR/E801,	50341
3	359151	signal lamp/green	MBR/E803,	53148, 53154
4	359152	signal lamp/yellow	MBR/E1003,	53149, 53155
5	359150	signal lamp/red	MBR/E1013	53150, 53153



Item	Order	Description	Model	OEM
1	390156	thermostat	MBR/E801,	51360
2	110046	knob	MBR/E803,	26915
3	375572	safety thermostat	MBR/E1003,	53980
4	380204	contactor	MBR/E1013	75796



Item	Order	Description	Model	OEM
1	375581	thermostat		02109
2	111669	knob	HBR/E800-801,	59468
3	359364	signal lamp/green	HBR/E805-806,	58658
4	359365	signal lamp/yellow	HBR/E810-811,	58659
5	359366	signal lamp/red	HBR/E815-816	58712



Item	Order	Description	Model	OEM
1	380015	energy regulator	HBR/E800-801,	55016
2	111670	knob	HBR/E805-806,	59469
3	345032	micro switch	HBR/E810-811,	46063
4	375572	safety thermostat	HBR/E815-816	53980



Item	Order	Description	Model	OEM
1	380261	contactor	HBR/E800-801,	58805
2	380637	contactor	HBR/E805-806	54928



Item	Order	Description	Model	OEM
1	375581	thermostat		02109
2	111671	knob	HBR/E820,	02104
3	359364	signal lamp/green	HBR/E825	58658
4	359365	signal lamp/yellow		58659



Item	Order	Description	Model	OEM
1	375571	safety thermostat		51454
2	380244	contactor	HBR/E820,	03598
3	345254	micro switch	HBR/E825	53671



Item	Order	Description	Model	OEM
1	345038	switch	HBR/E820,	58274
2	345039	hood	HBR/E825	53979
3	373017	solenoid valve		55132



Item	Order	Description	Model	OEM
1	345038	switch		58274
2	345039	protecting cover	NBRE800, NBRE810,	53979
3	370015	solenoid valve	NBRE815,	DC0688
4	345254	micro switch	NBRE820	53671



Item	Order	Description	Model	OEM
1	375581	thermostat	NBRE800,	02109
2	111620	panel	NBRE810, NBRE815,	0C0258
3	111602	knob	NBRE820	0C0257



Item	Order	Description	Model	OEM
1	380015	energy regulator	NBRE800,	55016
2	111609	panel	NBRE810, NBRE815,	0C0318
3	111602	knob	NBRE820	0C0257



Item	Order	Description	Model	OEM
1	375565	safety thermostat		0C0270
2	380261	contactor	NBRE800, NBRE810,	06879
3	359364	signal lamp/green	NBRE815,	05010
4	359365	signal lamp/yellow	NBRE820	05011

Tilting bratt pans (motor driven)



Item	Order	Description	Model	OEM
1	346340	switch/complete	RBR/E,	A2196
2	346362	micro switch	RBR/G,	A2195, 58344
3	500626	motor	MBR/G, MBR/E	56980



Item	Order	Description	Model	OEM
1	693261	v-belt pulley	RBR/E,	56976
2	693262	v-belt	RBR/G,	52804
3	700420	spring/motor tension	MBR/G,	56975
4	700421	spring/foot switch	MBR/E	56977



Item	Order	Description	Model	OEM
1	345254	micro switch		53671
2	500823	motor		52802
3	n. l. a.	belt pulley	HBR/G1013	52784
4	693264	belt pulley		52783
5	693262	v-belt		52804

no longer available



Item	Order	Description	Model	OEM
1	n. l. a.	ball bearing		52799
2	693266	nut	HBR/31013	52800
3	693267	shaft		52803
4	523519	ball bearing		51298



Item	Order	Description	Model	OEM
1	500628	motor	HBR/ 811	02794
2	693270	gearbox	HBR/ 816	02795



Item	Order	Description	Model	OEM
1	345038	switch		58274
2	345039	hood	HBR/ 811	
3	345032	micro switch	HBR/ 816	02785, 58926



Item	Order	Description	Model	OEM
1	700422	spring/motor tension		52789
2	700423	spring/foot switch	HBR/31013	52787



Item	Order	Description	Model	OEM
1	500627	motor/complete	HBR/ 801	02144
2	n. l. a.	v-belt pulley	HBR/ 806	02146
3	693268	v-belt pulley	HBR/ 811	02147
4	693269	v-belt	HBR/ 816	02148

Tilting bratt pans (mechanical)



Item	Order	Description	Model	OEM
1	523510	ball bearing		56820
2	523520	ball bearing		56821
3	693271	shaft	RBR/ MBR/ MBH/	56823
4	693272	bush		56818
5	n. l. a.	holder		56824
6	693274	bush		56825



Item	Order	Description	Model	OEM
1	346309	switch		02149
2	301036	protective cover	HBR/ 801, HBR/ 806	02150
3	345032	micro switch	HBR/ 811	46063, 58926
4	380312	relay	HBR/ 816	58857, 56466



Item	Order	Description	Model	OEM
1	693624	hand wheel		56826
2	693275	chain		56862
3	693276	chain closing link	RBR/ MBR/ MBH/	56863
4	693277	chain end		56827
5	693278	chain end		56830



Item	Order	Description	Model	OEM
1	700424	lid spring		56846
2	693279	rod/complete	RBR/_ , MBR/_ , MBF/_	56852
3	516193	clamp		56853



Item	Order	Description	Model	OEM
1	693291	nut		0C0675
2	693292	shaft	NBRG/_ , NBRE/_	0C0674
3	523510	bearing		0C0673
4	693399	hand wheel		A5164
5	514250	hand crank		02276



Item	Order	Description	Model	OEM
1	693318	nut		51264
2	693282	ring		51277
3	693283	shaft	HBR/_ 801, HBR/_ 803, HBR/_ 804,	51336
4	693284	holder		51265
5	523519	ball bearing	HBR/_ 1003	51298
6	690858	hand wheel		52392
7	690859	handle		52393



Item	Order	Description	Model	OEM
1	693294	spring inclination	NBRG/_ , NBRE/_	0C0671
2	693295	spring cap		0C0666



Item	Order	Description	Model	OEM
1	693285	adjust ring	HBR/_ 801, HBR/_ 803, HBR/_ 804,	51266
2	693286	spring		51268
3	693287	spring compressor	HBR/_ 1003,	51267
4	693288	hinge	HBR/_ 820, HBR/_ 825	51260



Item	Order	Description	Model	OEM
1	540799	tap	HBR/_ G, HBR/_ E	02322
2	540989	inlet pipe	NBRG/_ , NBRE/_	0C0689



Item	Order	Description	Model	OEM
1	693399	hand wheel	HBR/_ 800-801,	A5164
2	514250	hand crank	HBR/_ 805-806,	02276
3	693289	spring	HBR/_ 810-811,	A5150
4	693290	spring compressor	HBR/_ 815-816	A2551

Boiling pans (gas)



Item	Order	Description	Model	OEM
1	104157	burner	RPNG ₁ , RPN/G1 ₁ , MPNG ₁ , MPNGI ₁	51716
2	105641	burner	MPNG2 ₁ , MPNG2 ₂ , PPN/GD ₁ , PPN/GI ₁	04847
3	105654	burner	HQNG917, HQNGI 917	51563
3	105655	burner	HQNGI 1225, HQNGI 1225	51564



Item	Order	Description	Model	OEM
1	n. l. a.	burner/right	HPNG810, HPNGI 810, HPA/G810, HPA/GI 810	51799
2	n. l. a.	burner/left		51800
3	105658	burner/right	HPNG815, HPNGI 815, HPA/G815, HPA/GI 815	51797
4	n. l. a.	burner/left		51798



Item	Order	Description	Model	OEM
1	105660	burner	HPNG0 810-811, HPNGI 810-811, HPNG0 815-816, HPNGI 815-816	59506
2	104157	burner	HPNGI 805-806	51716
3	105661	burner	NPGD ₁ , NPNGI ₁	0C0743



Item	Order	Description	Model	OEM
1	101091	gas tap		54811
2	111599	knob	RPNG760, RPNGI 760	52694
3	100007	piezoelectric igniter		52539



Item	Order	Description	Model	OEM
1	101091	gas tap		54811
2	110309	knob	MPNGD 760-761, MPNGI 760	58597
3	100012	piezoelectric igniter		02603
4	101339	hood		02816



Item	Order	Description	Model	OEM
1	100106	pilot burner	RPNGI760, RPNGI 760, MPNGD760, MPNGI761, MPNGI 760	57757 58529 58715 56754 51565
3	102044	thermocouple, 1200mm		20094



Item	Order	Description	Model	OEM
1	101087	gas tap		52146
2	110448	knob	MPNG2 ₁ , MPNGI2 ₁	59378
3	100012	piezoelectric igniter	PPNGD ₁ , PPNGI ₁	02603
4	101339	hood		02816



Item	Order	Description	Model	OEM
1	100109	pilot burner	MPD/G2	A2472
2	100701	electrode	MPI/G2	59988
3	102044	thermocouple, 1200mm	PPNG/D, PPNG/L	20094



Item	Order	Description	Model	OEM
1	102250	thermocouple	MPD/G2, MPI/G2	56914
2	375586	safety thermostat	PPNG/D, PPNG/L	A5435



Item	Order	Description	Model	OEM
1	101091	gas tap	HPN/G810, HPN/G815, HPN/GI 810, HPN/GI 815, HPA/GI 815, HQN/G 917, HQN/GI 917, HQN/G 1225, HQN/GI 1225	54811
2	110045	knob		52138
3	100007	piezoelectric igniter		52539

no longer available



Item	Order	Description	Model	OEM
1	n. l. a.	VR8-valve	HPN/G810D, HPN/G815D,	37578
2	110070	knob	HPN/GI810D, HPN/GI815D,	51638
3	100001	piezoelectric igniter	HQN/GI D, HQN/GI D	51567



Item	Order	Description	Model	OEM
1	100100	pilot burner	HPN/G, HPN/GI,	57737, 51624, 58329
2	100706	electrode	HPA/GI,	51565, 56754
3	102253	thermocouple	HQN/G, HQN/GI	51635
4	390045	safety thermostat		51637



Item	Order	Description	Model	OEM
1	101091	gas tap	HPN/GI,	59505, 54811
2	110448	knob	HPN/GI,	59378
3	100012	piezoelectric igniter	HPA/GI, HPA/G5	02605
4	101339	hood		02605, 02816



Item	Order	Description	Model	OEM
1	100050	pilot burner	HPN/GI,	59379
2	100701	electrode	HPN/GI, HPA/GI,	59380
3	102250	thermocouple	HPA/G5	56914



Item	Order	Description	Model	OEM
1	375588	safety thermostat 285°C/until No. 210	HPN/GI3	53183
2	375589	thermostat from No. 211	HPA-GI	06709
3	375577	safety thermostat 170°C	HPN/GI1, HPA-GI	05295



Item	Order	Description	Model	OEM
1	380015	energy regulator		55016
2	111608	panel	NPG	0C0317
3	111602	knob		0C0257



Item	Order	Description	Model	OEM
1	300074	switch		A2162
2	110449	knob	HPN/GI 810, HPN/GI 815-816	59333
3	101948	solenoid valve	HPN/GI 805	59509
4	541350	pressure switch	HPN/GI 800	A2480
5	359364	signal lamp		58658



Item	Order	Description	Model	OEM
1	541350	pressure switch		A2480
2	372017	solenoid valve	NPG	55132
3	359364	signal lamp/green		05010
4	359367	signal lamp/red		0C0687

Boiling pans (electric)




Item	Order	Description	Model	OEM
1	101898	pilot burner		0C0744
2	100701	electrode	HPN/GI 810, HPN/GI 815-816	59580
3	102250	thermocouple	HPN/GI 805, HPN/GI 806	56914
4	375577	safety thermostat	NPGI	05295
4	375675	safety thermostat	NPGID	0C1000



Item	Order	Description	Model	OEM
1	418189	4700 W/230 V with thermostat pocket	RPN/EI 660, MPN/EI 760	49307, 02524, 26453, 57698
2	415069	4500 W/230 V thermostat pocket	MPLE 240, MPLE260, MPLE260P	5557, 02523, 45518
3	510408	gasket	PPNEI 740, PPNEI 760	46213
4	520236	flange	PPNEI 761, HPN/EI 805, HPN/EI 806	65558



Item	Order	Description	Model	OEM
1	301216	switch		59544
2	111675	panel	NPG	0C0711
3	111602	knob		0C0257

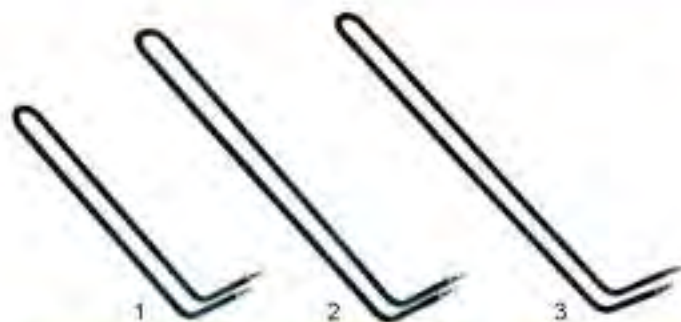 

Item	Order	Description	Model	OEM
1	418006	750 W/230 V	HPN/EI 810, HPN/EI 815, 51857	59681, 51854, 51857
2	418007	1050 W/230 V	HPN/ED810, HPN/ED811, 51858	59680, 51855, 51858
3	418008	1250 W/230 V	HPA/ED825	59679, 51856, 51859



Item	Order	Description	Model	OEM
1	415069	4500 W/230 V	HPN/EI 815	65557, 45518
2	415379	6000 W/230 V with thermostat pocket	HPN/EI 815, HPN/EI 917, HPN/EI 1225, HQN/EI	51632, 51633
3	415405	6000 W/230 V without thermostat pocket	HPN/EI 917, HPN/EI 1225, HQN/EI	66110, 45559, 58011, 76035
4	510408	gasket		46213
5	520236	flange		65558



Item	Order	Description	Model	OEM
1	418189	4700 W/230 V	NPEI 806	02524
2	418126	7500 W/230 V	NPNEI (2nd generation), HPNS/EI (2nd generation), HPA/EI (2nd generation)	59665
3	418017	10750 W/230 V	NPEI 810, NPEI 815	0C0715
4	510408	gasket		46213



Item	Order	Description	Model	OEM
1	418190	6000 W/230 V		03409, 03410
2	550680	flange	HPN/EI 855, HPN/EI 1255	03524



Item	Order	Description	Model	OEM
1	300009	switch		51647
2	111639	knob	RPN/EI 760	51697
3	300102	switch		50857
4	111638	knob		36797



Item	Order	Description	Model	OEM
1	390165	safety thermostat		51644
2	359109	signal element/green	RPN/EI 760	54150
2	359110	signal element/yellow		53811
3	359803	lens/green		54151
4	359804	lens/yellow		75589



Item	Order	Description	Model	OEM
1	380015	energy regulator		55016
2	110546	knob	MPN/EI 760	02522
3	390165	safety thermostat		51644
4	359364	signal lamp green		58658, 05010
5	359365	signal lamp yellow		05012



Item	Order	Description	Model	OEM
1	301210	switch	MP/E 240,	04741
2	110428	knob	MP/E 260,	59230
3	301216	switch	PPNE1 740,	59544
4	111676	knob	PPNE1 760, PPNE1 761	04885



Item	Order	Description	Model	OEM
1	380015	energy regulator	HPNEI (2.Gen.),	55016
2	110429	knob	HPNEI, MPA/ED,	59554
3	359364	signal lamp green	MPA/EI	58658
4	541350	pressure switch	HPNEI806	A2480



Item	Order	Description	Model	OEM
1	375209	safety thermostat	MP/E 240,	04862
2	373017	solenoid valve	MP/E 260,	55132
3	359364	signal lamp/green	MP/E 260P	05010
4	541350	pressure switch	MP/E 260P, PPNE1761	A2480



Item	Order	Description	Model	OEM
1	375571	safety thermostat	HPNE810, HPNE815	51454
2	390044	safety thermostat	HPNEI, HQNEI	51636
3	375563	safety thermostat	HPNEI	04600
4	375209	safety thermostat	HPNEI (2. Gen.)	04862



Item	Order	Description	Model	OEM
1	300009	switch		51647
2	110042	knob	HPNE,	51552
3	300102	switch	HPNEI	50857
4	110043	knob		50341



Pos.	Order	Description	Model	OEM
1	541349	pressure switch		55052



Item	Order	Description	Model	OEM
1	300008	switch		51634
2	110042	knob	HQNE817,	51552
3	300020	switch	HQNEI1225	28390
4	110043	knob		50341



Item	Order	Description	Model	OEM
1	380015	energy regulator	NPEI806,	55016
2	111608	panel	NPEI810,	0C0317
3	111602	knob	NPEI815	0C0257



Item	Order	Description	Model	OEM
1	301216	switch	NPEI806,	59544
2	111675	panel	NPEI810,	0C0711
3	111602	knob	NPEI815	0C0257



Item	Order	Description	Model	OEM
1	375209	safety thermostat		04862
2	541350	pressure switch		A2480
3	373017	solenoid valve	NPE1806, NPE1810, NPE1815	55132
4	359364	signal lamp/green		05010
5	359367	signal lamp/red		0C0687

Boiling pans (mechanical)



Item	Order	Description	Model	OEM
1	540971	inlet tap/right		25733, 03516
2	540930	inlet tap/left		26537, 03517
3	111642	knob	RPN	51694
4	111678	knob		51695
5	550843	screw		51675
6	540990	inlet pipe		51672



Item	Order	Description	Model	OEM
1	540971	inlet tap/right		03516
2	540930	inlet tap/left		03517
3	111642	knob	MPN	58632
4	111678	knob		58708
5	540990	inlet pipe		51672



Item	Order	Description	Model	OEM
1	540991	inlet tap		A5258
2	540923	extension	MPD, MPL	A2135
3	111643	knob	PPNG	04480
4	111667	knob	PPNE	04482
5	540966	inlet pipe		04537



Item	Order	Description	Model	OEM
1	540971	inlet tap/right		25733
2	540930	inlet tap/left		26537
3	110287	knob/black	HPN (1st generation), HQN (1st generation)	25260, 54254
4	110288	cap	HPA (1st generation)	54367
5	540992	inlet pipe		54521



Item	Order	Description	Model	OEM
1	540971	inlet tap/right		03516
2	540930	inlet tap/left		03517
3	111644	knob	HPN (2nd generation), HPA (2nd generation)	59531
4	111680	knob	HPNS (2nd generation)	59516
5	540992	inlet pipe		51521



no longer available

Item	Order	Description	Model	OEM
1	540822	fitting holder		54808
2	540823	safety valve	RPN ₁	04863, 54806
3	540825	pressure relief valve	MPN ₁	51566
4	540834	cap	MPI ₁	27297
5	n. l. a.	testing tap	PPN ₁	51568



no longer available

Item	Order	Description	Model	OEM
1	540721	safety valve		57493, 56691
2	540993	pressure gauge holder	HPN ₁	51642
3	540825	pressure relief valve	HQN ₁ , NPGL	51566
4	540834	cap	NPEI	27297
5	n. l. a.	testing tap		51568



Item	Order	Description	Model	OEM
1	541062	manometer	HPN, HQN	17055
2	541334	manometer	HPN (2nd generation)	59515
3	541339	manometer	NPGL, NPEI	0C0712



Item	Order	Description	Model	OEM
1	540722	safety valve	autoclaves	52623
2	514304	safety valve	MPN ₁ , D	59663
3	540826	pressure relief valve		59664



Item	Order	Description	Model	OEM
1	540999	drain cock, M68x3	RPN ₁	52907, 050137
2	548001	drain cock, M68x3	MPN ₁ , MPD ₁ , MPI ₁ , PPN ₁	02520



Item	Order	Description	Model	OEM
1	540157	drain cock, M78x3mm	HPN ₁ , HPN ₂	53159, 050138
2	540275	drain cock, 2"	HPN ₁ , HPN ₂	08027, 050135



Item	Order	Description	Model	OEM
1	693296	adaptor	MPN ₁ , D	56923
2	693297	adaptor	HPN ₁ , D	55403
3	540134	drain cock, 2"	MPN ₁ , D, HPN ₁ , D	52882



Item	Order	Description	Model	OEM
1	693298	holder/left		52892
2	693299	spring	RPN ₁ , MPN ₁	52894
3	693300	bush		52897
4	693301	holder/right		52891



Item	Order	Description	Model	OEM
1	693302	holder		04849
2	693304	spring	MPI_, MPD_, PPN_	04850
3	693305	tension adjuster		A2612



Item	Order	Description	Model	OEM
1	693307	holder		02944
2	693308	bush		59864
3	693309	bush		59865
4	693310	bush	HPN_ (2nd generation)	59865
5	693311	screw		59860
6	693312	screw		59859



Item	Order	Description	Model	OEM
1	693306	holder/right		02106, 51288
2	693285	bush/right	HPN_, HPA_, HQN_	51266
3	693287	bush/left		51267
4	693288	holder/left		51260, 02107



Item	Order	Description	Model	OEM
1	693313	spring	HPN_ (H900)	51527
2	693286	spring	HQN_ (H900)	51268
3	693314	spring	HPN_ (H0920), HPA_ (H0920)	59528
4	693315	spring	HPN_ 825, HPA_ 825	02981
5	693316	spring	NPG_, NPI_	59518

Hot-air devices



Item	Order	Description	Model	OEM
1	375664	thermostat	FCF/E4	54323
2	301095	switch		54324
3	111684	knob		54278, 66204



Item	Order	Description	Model	OEM
1	375665	thermostat	FCF/E4 (240271/2)	05207
2	111686	knob		05208
3	301229	switch		05213
4	111687	knob		05209



Item	Order	Description	Model	OEM
1	350008	timer	FCF/E4	53817
2	110048	knob		53814
3	350162	timer	FCF/E4 (new)	03431
4	n. l. n.	knob		55434




Item	Order	Description	Model	OEM
1	350163	timer	FCF/E4 (240271/2)	05216
2	111688	knob		05210
3	359140	signal element/yellow		05215
4	359138	signal element/red		05214
5	359845	lens/yellow		05211
6	359844	lens/red		05212



Pos.	Order	Description	Model	OEM
1	111770	knob set (3-piece)	FCF/E4 (new)	06948



Item	Order	Description	Model	OEM
1	390068	thermostat	FCF/ 6, FCF/E2	57937
2	300001	switch		54375
3	110472	knob		54594, 53813

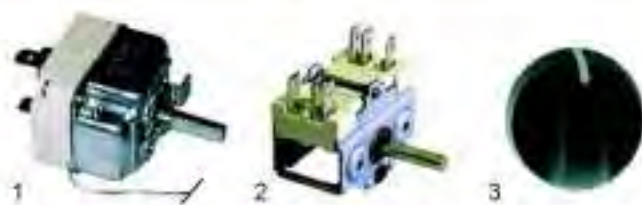 

Item	Order	Description	Model	OEM
1	390068	thermostat	FCF/E2 (240270)	57937
2	300001	switch		54375
3	111685	knob		03981



Item	Order	Description	Model	OEM
1	390068	thermostat	FCF/ 10,	57937
2	110472	knob	FCF/ 20	53813



Item	Order	Description	Model	OEM
1	360341	timer	FCF/E3 (240270)	03833
2	345151	switch		54518
3	345039	protecting cover		53979



Item	Order	Description	Model	OEM
1	350008	timer		53817, 03432
2	110048	knob	FCF/E2 (until 91), FCF/_6 (until 91), FCF/_10	53814, 03850
3	380017	energy regulator		53695
4	110473	knob		54595, 53815



Item	Order	Description	Model	OEM
1	350004	timer		55366
2	110475	knob	FCF/E2 (from 91), FCF/_6 (from 91)	55434, 55364
3	380015	energy regulator		55016
4	110473	knob		54595, 53815



Item	Order	Description	Model	OEM
1	380015	energy regulator		55016
2	301094	switch	FCF/_10 (from 91)	55017
3	110474	knob		55026



Item	Order	Description	Model	OEM
1	345983	switch 0-I		53810
2	346384	switch I-II	FCF/_10 (until 91), FCF/_20 (until 91)	53837
3	346385	changer switch		54552



Item	Order	Description	Model	OEM
1	346386	switch	FCF/_10 (from 91), FCF/_20 (from 91)	58808
2	345390	switch	FCF/G20, FCF/G40	54547, 55014




Item	Order	Description	Model	OEM
1	359110	signal element/yellow		53811
2	359109	signal element/green	universal	54150
3	359804	lens/yellow		53812
4	359803	lens-green		54151



Item	Order	Description	Model	OEM
1	379060	sensor	FCF/_6, FCFV/_61, FCF/_10	02673
2	379976	sensor	FCF/_102	02821



Item	Order	Description	Model	OEM
1	379061	sensor	FCF/_20 (until 039), FCF/_201 (until 039), FCF/_202 (until 039)	03853
2	379977	sensor	FCF/_20 (from 040), FCF/_201 (from 040), FCF/_202 (from 040)	06174

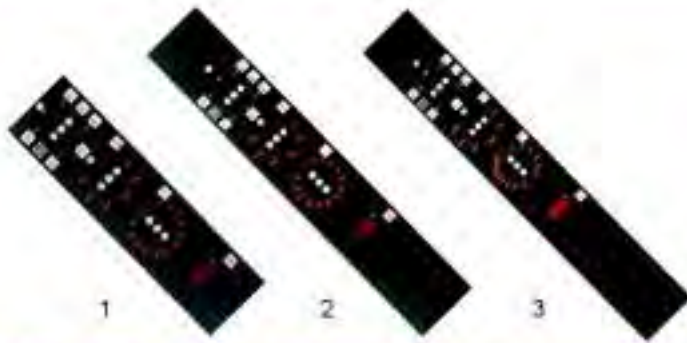 

Item	Order	Description	Model	OEM
1	401130	fascia	FCF/ 6	03689
2	401131	fascia	FCF/ 101, FCF/ 102	03714
3	401132	fascia	FCF/ 201, FCF/ 202	03838



Item	Order	Description	Model	OEM
1	400744	p.c.b.	FCF/	03763
2	379060	sensor/core temperature	FCF/ 101	02673
2	379061	sensor/core temperature	FCF/ 201, FCF/ 202	03853



Item	Order	Description	Model	OEM
1	111710	knob		02672
2	359139	signal lamp/green	universal	58544
3	359140	signal lamp/yellow		58522



Item	Order	Description	Model	OEM
1	693429	bush		02662
2	693432	gasket		02665
3	693430	nut	FCF/ (core temperature- electronic controller)	51263
4	693431	disc		02727
5	111773	knob		02671



Item	Order	Description	Model	OEM
1	345651	switch		03766
2	346310	element holder	core temperature Zus- chutz FCF/	03767
3	346311	button		03768
4	345039	protecting cover		53979



Item	Order	Description	Model	OEM
1	375572	safety thermostat	FCF/G (until '97)	53980
2	375579	safety thermostat	FCF/G (from '97), FCF/E2 (from '91), FCF/E3	03594
3	375162	safety thermostat	FCF/E2, FCF/E40	58198




Item	Order	Description	Model	OEM
1	375625	contact thermostat	FCF/E4 (until '97)	54321
2	375170	safety thermostat	FCF/E4 (from '97)	02711
3	375624	safety contact thermostat	FCF/E4 (from '00)	05206
4	375666	contact thermostat		05203




Item	Order	Description	Model	OEM
1	601199	motor		05202
2	601200	fan wheel	FCF/E4 (from '00)	05221
3	418083	3000 W/230V		55503



Item	Order	Description	Model	OEM
1	375167	safety thermostat	FCF/E_	02730
2	350070	alarm device		55368
3	373017	solenoid valve	universal	53827, 47533, 55132

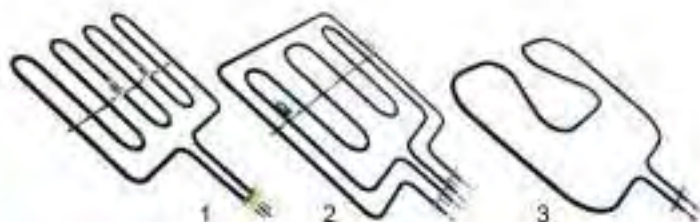 

Item	Order	Description	Model	OEM
1	418081	200 W/230V	FCF/E4 (until '00)	54326
2	418082	2550 W/230V	FCF/E4 (from '00)	05205
3	418078	1000 W/230V		05218

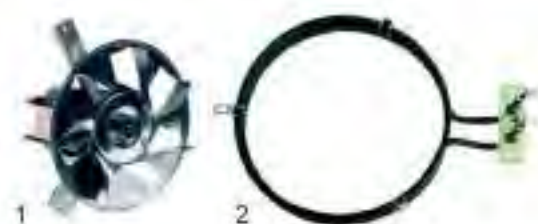 

Item	Order	Description	Model	OEM
1	601198	motor/complete	FCF/E2, FCF/E3	54842
2	415117	2500 W/230V	FCF/E2	54317, 54843



Item	Order	Description	Model	OEM
1	601040	motor		54829, 58587
2	601235	fan wheel	FCF_6	54585



Item	Order	Description	Model	OEM
1	601201	motor/complete	FCF/E4 (until '00)	54514
2	418083	3000 W/230V		55503
3	601004	fan with transverse flow	FCF/E4 (from '00)	05204



Item	Order	Description	Model	OEM
1	601041	motor		54836, 58667
2	601197	fan wheel	FCF_10	53782




Item	Order	Description	Model	OEM
1	601042	motor	FCF_20,	54837, 58607
2	601218	fan wheel	FCF_40	54014



Item	Order	Description	Model	OEM
1	500141	motor	FCF_6 (from '97), FCF_101, FCF_201	02616, 080007
2	601220	fan wheel	FCF_6 (from '97)	03560
3	601197	fan wheel	FCF_101	53782, 54890



Item	Order	Description	Model	OEM
1	500143	motor	FCF_102,	02739
2	601232	fan wheel	FCF/202	03715

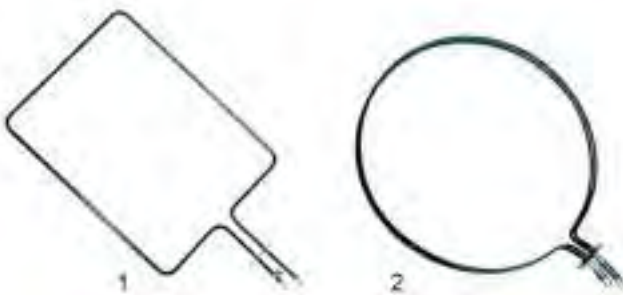 

Item	Order	Description	Model	OEM
1	415351	2500W/230V	FCF/E6	54610, 54614, 56945, 58145
2	415389	3566W/230V	FCF/E10	58196, 58197, 53839



Item	Order	Description	Model	OEM
1	415391	8000W/230V	FCF/E20, FCF/E40	54051, 54289, 56029, 56934
2	415654	5660W/230V	FCF/E101, FCF/E201	02688



Item	Order	Description	Model	OEM
1	415656	8000W/400V	FCF/E102, FCF/E202	A5330
2	550545	gasket	FCF/E6	37534
3	550546	gasket	FCF/E10, FCF/E20, FCF/E40	53840
4	550547	gasket	FCF/E101	03726



Item	Order	Description	Model	OEM
1	359376	bulb holder		54320
2	359610	bulb, 15W	FCF/E4	54319
3	359377	lens		54318



Item	Order	Description	Model	OEM
1	359375	bulb holder	FCF/E3	03956
2	359612	bulb, 25W		54840



Item	Order	Description	Model	OEM
1	359713	bulb holder		54991
2	359714	gasket		55022
3	359715	glass	FCF/_40	
4	359716	housing		
5	359612	bulb		54840



Item	Order	Description	Model	OEM
1	359765	flange		02628
2	359764	glass	FCF/_6 (from '93), FCF/_101 (from '93)	02627
5	359763	gasket	FCF/_102 (from '93)	02626
4	359612	bulb	FCF/_201 (from '93)	54840
5	359701	bulb holder	FCF/_202 (from '93)	02625

Gas components



Item	Order	Description	Model	OEM
1	105764	burner	FCF/G6	54573
2	105765	burner	FCF/G10	53786



Item	Order	Description	Model	OEM
1	105766	burner	FCF/G20	54028
2	105767	burner	FCF/G40	55007
5	105768	burner	FCF/G6 (from '97)	03677
4	105769	burner	FCF/G101, FCF/G102, FCF/G201	03709
5	105770	burner	FCF/G202	04833



Item	Order	Description	Model	OEM
1	101002	ignition unit		03376, 51884
2	100052	pilot burner	FCF/G6 FCF/G10	57411
5	100051	pilot burner	FCF/G20 FCF/G40 FCF/G6 (from '97) FCF/G101, 102, 202	54032



Item	Order	Description	Model	OEM
1	100701	electrode	universal	52610
2	102070	thermocouple		54055



Item	Order	Description	Model	OEM
1	101183	composite valve	FCF/G6 (from '97)	53973
2	101127	Electrosit gas valve	FCF/G10	57543
3	101312	micro switch	FCF/G20 FCF/G40	54539



Item	Order	Description	Model	OEM
1	101761	Novasit gas valve	FCF/G6 (from '97), FCF/G101, 201, 202	03719
2	101760	Novasit gas valve	FCF/G101	06182
5	111646	knob		03704



Item	Order	Description	Model	OEM
1	690874	handle		02717
2	700470	holder	FCF/_201	03826
3	700471	bearing	FCF/_202	03994
4	700472	flange		04098
5	700488	gearbox		03824




Item	Order	Description	Model	OEM
1	690869	rod		03825
2	690041	ratchet	FCF/_201	03822
3	690875	housing	FCF/_202	04104
4	700491	gasket		03990
5	690040	door catch		04232




Item	Order	Description	Model	OEM
1	541090	thermometer	FCF/_ (from '97)	56385
2	541353	thermometer	FCF/_	53808
3	507317	gasket	universal	53809




Item	Order	Description	Model	OEM
1	900273	door seal	FCF/E2	54850
2	900270	window seal	FCF/E2/E3/E4	57866

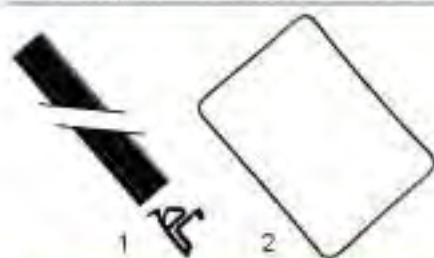 


Item	Order	Description	Model	OEM
1	900277	door seal		56341, 05885
2	900279	window seal	FCF/E4 (from '00)	05194

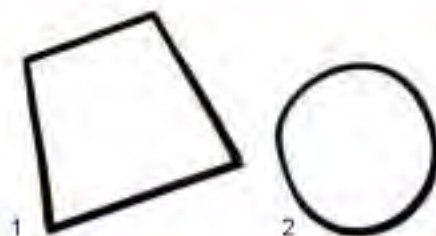 

Item	Order	Description	Model	OEM
1	900187	door seal, 585 x 395mm	FCF/_6 (until '97)	55414
2	900190	window seal		55412

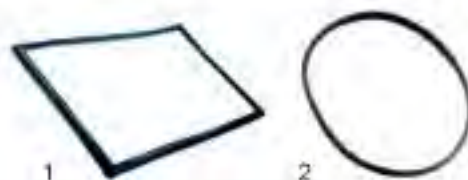 

Item	Order	Description	Model	OEM
1	900433	door seal, 635 x 430mm	FCF/_6 (from '97)	04226, 05713
2	900272	window seal		03680

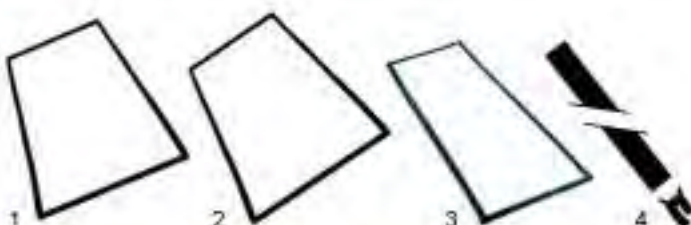 

Item	Order	Description	Model	OEM
1	900188	door seal, 640 x 720mm	FCF/_10 FCF/_20 (from '86)	55315
2	900189	door seal, 645 x 715mm	FCF/_20 (until '86)	53751
3	900275	door seal, 645 x 1380mm	FCF/_40	54986
4	900270	window seal	universal	53754, 57866



Item	Order	Description	Model	OEM
1	900160	door seal, 660 x 730mm	FCF/_101 FCF/_102	04227, 05712
2	900434	door seal, 660 x 1395mm	FCF/_201 FCF/_202	03955, 05711
3	900269	window seal/inner	FCF/_101	03739
4	900186	window seal/outer	FCF/_102 FCF/_201 FCF/_202	02878

Combination steamers Front screen



Item	Order	Description	Model	OEM
1	300014	program switch	FCV/ 6	55365
2	111761	knob	FCV/ 10	55363, 56127
3	390068	thermostat	FCV/ 202V	57937
4	110472	knob		53813



Item	Order	Description	Model	OEM
1	350004	timer	FCV/ 6	55366
2	111715	knob	FCV/ 20	55434
3	380015	energy regulator	FCV/ 202V	55016



Item	Order	Description	Model	OEM
1	359110	signal element/clear		55811
1	359109	signal element/green	FCV/ 6 (until '91)	54150
2	359803	lens green	FCV/ 10 (until '91)	54151
3	359804	lens yellow	FCV/ 20 (until '91)	53812
4	359805	lens red	FCV/ 202V (until '91)	75589



Item	Order	Description	Model	OEM
1	359139	signal lamp/green	FCV/ 6 (from '91)	58544
2	359140	signal lamp/yellow	FCV/ 10 (from '91)	58522
3	359138	signal lamp/red	FCV/ 20 (from '91)	58605



Item	Order	Description	Model	OEM
1	301093	program switch		56674
2	300020	core temperature switch	FCV/E _CE	28390
3	111762	gasket		56500
4	111763	knob		56503



Item	Order	Description	Model	OEM
1	359842	signal lamp	FCV/E _CE	56501
2	359843	push button		56504



Item	Order	Description	Model	OEM
1	400026	display p.c.b.		58673
2	400025	core temperature p.c.b.	FCV/E _CE	58674
3	379107	sensor		58669



Item	Order	Description	Model	OEM
1	401210	fascia	FCV/E6-3CE	56673
2	401215	fascia	FCV/E10-3CE FCV/E20-3CE	56680




Item	Order	Description	Model	OEM
1	401253	p.c.b.		59000
2	401217	fascia	FCV/ 10-P FCV/E20-P	59288
3	379107	sensor		58669



Item	Order	Description	Model	OEM
1	300068	program switch		02661
2	360341	timer	FCV/ _L2L3	03833
3	111710	knob		02672



Item	Order	Description	Model	OEM
1	400179	p.c.b. L3	FCV/ _L2/L3	02665
2	400188	p.c.b. L4	FCV/ _L4	02725
3	400184	p.c.b. L6	FCV/ _L6	02720

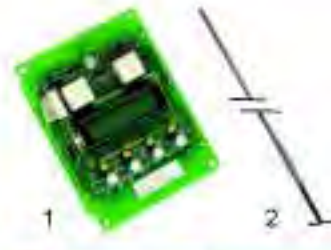 

Item	Order	Description	Model	OEM
1	401268	p.c.b.	Active Line	06518
2	379100	sensor	universal	02615



Item	Order	Description	Model	OEM
1	400745	p.c.b.	L2/L3	02684, 06715
2	400746	p.c.b.	L4/L6/L4 boiler/ L6 boiler	04079, 06517, 03546
3	400748	p.c.b.	L3 boiler	04105, 06716



Item	Order	Description	Model	OEM
1	401212	fascia	FCV/ _6-L3	03834
2	401213	fascia	FCV/ _6-L4	03664
3	401249	fascia	FCV/ _6-L6	05623



Item	Order	Description	Model	OEM
1	401292	p.c.b. core temperature	FCV/ _L2	02683
1	400187	p.c.b. core temperature		02666
2	693430	nut		51263
3	693431	disc	FCV/ _L3	02727
4	693429	bush	FCV/ _L4	02662
5	693432	gasket		02663
6	131773	knob		02671




Item	Order	Description	Model	OEM
1	401216	fascia	FCV/ _10-L2	03835
2	401250	fascia	FCV/ _10-L3/L4/ L6	03832
3	401247	fascia		02719
4	401251	fascia	FCV/ _10-(Active)	06529



Item	Order	Description	Model	OEM
1	400097	push button		02670
2	346287	switch		02418
3	345751	switch with push button	universal	05138
4	345753	push button		05137
5	345754	protecting cover		05109



Item	Order	Description	Model	OEM
1	400747	p.c.b. display Level A	AOS / A	0C0043
2	400751	p.c.b. Level A		07047
3	400749	p.c.b. Level B	AOS / B	0C0041

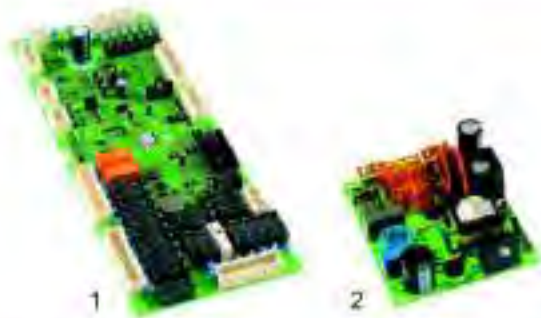 

Item	Order	Description	Model	OEM
1	400750	p.c.b.	ACS / A ACS / B	0C0042
2	400752	p.c.b.	ACS / G	0C1071



Item	Order	Description	Model	OEM
1	401211	fascia	ACS / A	07057
2	401214	fascia	ACS / B	07058



Item	Order	Description	Model	OEM
1	693431	disc		02727
2	693429	bush	ACS	02662
3	693430	nut		51263
4	111764	knob		07044

Core temperature



Item	Order	Description	Model	OEM
1	301142	switch core temperature	FCV / 6	55473
2	111765	knob	FCV / 10 FCV / 20	55474
3	400190	electronics	FCV / 202V	55471



Item	Order	Description	Model	OEM
1	379095	sensor	FCV / 6 FCV / 10 (until '91) FCV / 20 FCV / 20-P	55472
2	379037	sensor	FCV / 10 (until '91) FCV / 20-P	59002
3	379961	sensor	FCV / 202V FCV / 202-P	58199 02330



Item	Order	Description	Model	OEM
1	379969	sensor (multipoint)	AOS061GA (from No. 340)	0C1164
2	379960	sensor (multipoint)	AOS101GA (from No.340)	0C0956



Item	Order	Description	Model	OEM
1	379968	sensor (single point)	AOS201GA	0C1146
2	379970	sensor (multipoint)	AOS202GA AOS202EA	0C1404



Item	Order	Description	Model	OEM
1	379967	sensor (single point)	AOS201GB	0C0225
2	379959	sensor (single point)	AOS202GB AOS202EB	0C1383



Item	Order	Description	Model	OEM
1	379956	sensor (multipoint)	AOS061GA (until No. 339) AOS061EA AOS101GA (until No. 339)	0C0982
2	379958	sensor (single point)	AOS061EB	0C0983



Item	Order	Description	Model	OEM
1	379955	sensor (multipoint)	AOS101EA AOS201EA	0C7109
2	379957	sensor (single point)	AOS101EB AOS201EB	0C7063

Door switch



Item	Order	Description	Model	OEM
1	346376	magnetic switch	FCV/_ 6 (until 10/89)	26468
2	345254	micro switch	FCV/_ 10 (until 10/90) FCV/_ 20 (until 10/90)	54350 53671



Item	Order	Description	Model	OEM
1	345032	micro switch	FCV/_ 6 (from 10/89) FCV/_ 10 (from 10/90) FCV/_ 61, FCV/_ 101, FCV/_ 201, FCV/_ 202	46063
2	346387	micro switch	FCV/_ 20 (until 4/90)	56944
3	345821	magnetic switch	ACS/_ / _	49621

Level control



Item	Order	Description	Model	OEM
1	400018	level regulator	universal	56496, 55458
2	400120	electrode 94,5mm	FCV/336	56449
3	400121	electrode 114,5mm	FCV/336, FCV/E6 (until 10/91), FCV/_ 10 (until 10/90) FCV/_ 20 (until 10/90)	55346



Item	Order	Description	Model	OEM
1	401258	electrode 109mm	FCV/_ 10 (from 10/90) FCV/_ 20 (from 10/90)	12858
2	401259	electrode 143mm	FCV/G10 (from 10/90) FCV/G20 FCV/EG (from 10/91) FCV/EG202V	53909



Item	Order	Description	Model	OEM
1	401255	electrode 50mm	FCV/G61	05765
2	401254	electrode 60mm		05766
3	401260	electrode 50mm	FCV/G101-G102 FCV/G201-G202	02632
4	400124	electrode old	FCV/E61	02694
5	401261	electrode new 100mm	FCV/E101-G102 FCV/E201-E202	03878



Item	Order	Description	Model	OEM
1	401355	electrode, 50mm	AOS61G_	0C1086
2	401262	electrode, 147mm	AOS101G_ AOS102G_	0C1055
3	401263	electrode, 210mm	AOS6201G_ AOS202G_	0C1105



Item	Order	Description	Model	OEM
1	401264	electrode	ACS61E AOS101E	07033
2	401345	electrode	AOS201E	0C1201
3	401265	electrode	ACS6202E	05879

Electrical components



Item	Order	Description	Model	OEM
1	375113	thermostat 55°C	FCV/	55367
2	380015	energy regulator		55016
3	380312	relay	FCV/	56466
4	380315	relay	FCV/ 10 (until 10/90)	46001



Item	Order	Description	Model	OEM
1	375278	safety thermostat 140°C		56745
2	375113	thermostat	FCV/	56671
3	350070	alarm device		55368



Item	Order	Description	Model	OEM
1	375162	safety thermostat 340°C	FCV/ D	58222
2	380204	contactor	universal	75796



Item	Order	Description	Model	OEM
1	350085	alarm device		59001
2	401266	transformer	FCV/ 10-P	56512
3	401343	p.c.b.		59033



Item	Order	Description	Model	OEM
1	380636	relay 24V		56510
2	375209	safety thermostat 140°C	FCV/ 10-P	59079
3	380665	contactor		58670



Item	Order	Description	Model	OEM
1	375659	safety thermostat 338°C	AOS	07042
2	375657	safety thermostat 150°C	AOS G-	0C1147



Item	Order	Description	Model	OEM
1	380312	relay	AOS	058857
2	360342	motor + gearbox	AOS	0C0883
3	601080	fan	AOS	002656



Item	Order	Description	Model	OEM
1	401267	transformer	AOS	007045
2	379966	sensor	AOS	006995



Item	Order	Description	Model	OEM
1	359713	bulb housing	FCV/	54991
2	359714	gasket		55022
3	359612	bulb		54840



Item	Order	Description	Model	OEM
1	359765	flange		02628
2	359764	glass	FCV/	02627
3	359763	gasket	AOS/	02626
4	359599	lamp		02956, 07056



Item	Order	Description	Model	OEM
1	359762	lamp holder	FCV	02709, 06106
2	359841	lamp holder	AOS	07105



Item	Order	Description	Model	OEM
1	601040	motor		54829, 58587
2	693410	sealing ring	FCV/ 6	55339
3	693404	gasket		55371
4	601220	fan wheel 280mm		55422



Item	Order	Description	Model	OEM
1	601041	motor	FCV/ 202V, FCV/ 10	54836, 58667
1	500815	motor	FCV/ 10-P, FCV/ 202V-P	58994
2	693410	sealing ring		55339
3	693404	gasket	FCV/ 10, FCV/ 10-P	55371
4	601197	fan wheel 350mm		54890



Item	Order	Description	Model	OEM
1	601042	motor		54837, 58607
2	693411	sealing ring	FCV/ 20	55377
3	693404	gasket		55371
3	601218	fan wheel 440mm		55578



Item	Order	Description	Model	OEM
1	500141	motor/ 1 turns No.	FCV/ 6L3, FCV/ 10L2-3, FCV/ 201-L3, FCV/ 20L3	02616, 060007
1	500142	motor/ 2 turns No.	FCV/ 6L4, FCV/ 10L6, FCV/ 101 Active	02698
1	500814	motor/1 turns No.	FCV/ 61L3-4	05750
1	500653	motor/2 turns No.	FCV/ 61L6	05748
1	500654	motor/2 turns No.	FCV/ 20L6, FCV/ 201 Active	05028
2	511301	bearing		02699
3	511300	ring	universal	02873
4	601220	fan wheel 280mm	FCV/ 6, FCV/ 61	02754
5	601197	fan wheel 350mm	FCV/ 10, FCV/ 101, FCV/ 201, FCV/ 20	02617




Item	Order	Description	Model	OEM
1	500143	motor/1 turns No.	FCV/ 102 L3, FCV/ 202 L3	02739
1	500144	motor/2 turns No.	FCV/ 102 L6, FCV/ 102 Active, FCV/ 202 L6, FCV/ 202 Active	02748, 05237
2	511301	bearing		02699
3	511300	ring		02873
4	601218	fan wheel	FCV/ 102, FCV/ 202	02740



Item	Order	Description	Model	OEM
1	601222	motor	AOS061/...	006998
2	511301	bearing	AOS101/...	002699
3	511300	ring	AOS201/...	002873
4	601236	fan wheel 280mm	AOS061/...	007000
5	601233	fan wheel 350mm	AOS101/... AOS201/...	OC1129



Item	Order	Description	Model	OEM
1	500816	motor		OC1171
2	511301	bearing	AOS202/...	02699
3	511300	ring		02873
4	601234	fan wheel 380mm		OC1172

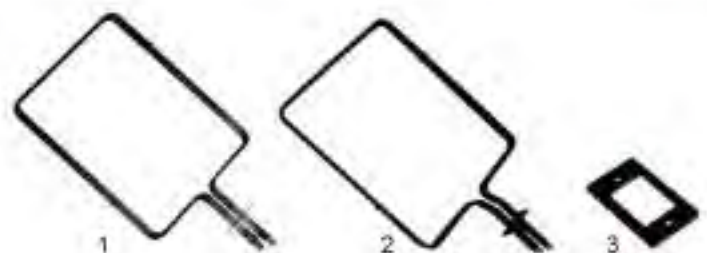 

Item	Order	Description	Model	OEM
1	415568	3750 W/3 phases 230V	FCV/E6	55439, 55462, 55930, 55949
2	415657	4500 W/3 phases 230V	FCV/E6 (from '99)	02757
3	550256	gasket	FCV/E6	55327



Item	Order	Description	Model	OEM
1	415389	5566 W/2 phases 230V	FCV/E10	58196, 58197, 53839, 54620
1	415654	5666 W/2 phases 230V	FCV/E10 (from '99), FCV/E20 (from '99)	02688
3	550256	gasket	FCV/E10	55327
3	550257	gasket	FCV/E10 (from '99), FCV/E20 (from '99)	02689



Item	Order	Description	Model	OEM
1	415591	8000 W/2 phases 230V	FCV/E20 (until '88)	56929, 54050, 54051
1	415593	8000 W/2 phases 400V	FCV/E20 (from '88)	55481, 56970
2	415656	8000 W/2 phases 400V	FCV/E102, FCV/E202	55330
3	550256	gasket	FCV/E20	55327
4	550257	gasket	FCV/E201, FCV/E202	A2689




Item	Order	Description	Model	OEM
1	418150	3200 W/400V	AOS061E	006984
2	418151	5670 W/400V	AOS101E, AOS201E	007064
3	418152	8000 W/400V	AOS202E	OC1173
4	550257	gasket	AOS_E	002689



Item	Order	Bschrbg.	Model	OEM
1	418188	7500 W/230V	FCV/E-6 (until '91)	56011, 55463
2	415594	7900 W/230V	FCV/E-6 (von '91 bis '99)	58606, 58604
3	415690	9000 W/230V	FCV/E-6 (from '99), FCV/E10 (von '91 bis '99)	02855, 58672



Item	Order	Description	Model	OEM
1	418156	17000 W/240V	FCV/E10 (until '91)	56012, 55464
2	415063	17000 W/240V	FCV/E10 (from '99), FCV/E101	58995
3	415809	24000 W/400V	FCV/E20 (until '00)	56013, 55466
4	415652	24000 W/400V	FCV/E102, FCV/E20 (from '00), FCV/E201, FCV/E202	02751
5	510408	gasket		46213

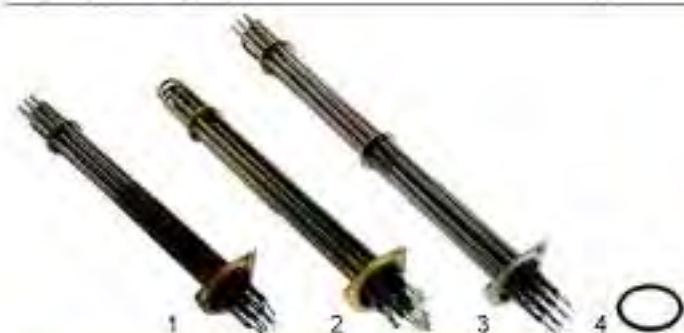 

Item	Order	Description	Model	OEM
1	418153	9000 W/400V	AOS61E	007030
2	418154	17000 W/400V	AOS101E	007076
3	418155	24000 W/400V	AOS201E, AOS202E	007101
4	510409	gasket		007029

Components (gas)



Item	Order	Description	Model	OEM
1	n. l. a.	burner (hot air)	FCV/G6 (until '91)	56450
2	105814	burner (hot air)	FCV/G6 (von '91 bis '99)	02126
3	105813	burner (hot air)	FCV/G6 (from '99)	02857
4	105784	burner (steam)	FCV/G6	56451



Item	Order	Description	Model	OEM
1	105767	burner (hot air + steam)	FCV/G10	55007
2	105786	burner (hot air)	FCV/G20	55487
3	105785	burner (steam)	FCV/G20	55486

Equipment with pilot burner



Item	Order	Description	Model	OEM
1	101183	composite valve		53973
2	111766	panel	FCV/G6	55454
3	111767	knob		56452



Item	Order	Description	Model	OEM
1	345038	ignition switches	FCV/G6 (until '99)	53978
2	345039	protecting cover		53979
3	100009	piezoelectric igniter	FCV/G6 (from '99)	59251
4	100012	piezoelectric igniter		02605



Item	Order	Description	Model	OEM
1	101162	Novasit gas valve		55446
2	111766	panel	FCV/G10, FCV/G20	55454
3	111768	knob		55447
4	101312	micro switch		54530



Item	Order	Description	Model	OEM
1	100046	pilot burner	FCV/G6, FCV/G10, FCV/G20	50813
2	100706	electrode		56754
3	100050	pilot burner	FCV/G6 (from '94) - only hot air	59379
4	100701	electrode		59380



Item	Order	Description	Model	OEM
1	102044	thermocouple, 1200mm	FCV/G6,	20094
2	102070	thermocouple, 1000mm, with break	FCV/G10, FCV/G20	54055
3	102265	thermocouple extension, 500mm	FCV/G10, FCV/G20	55032



Item	Order	Description	Model	OEM
1	102359	electrode	FCV/G6	02343
2	102360	electrode		02344
3	102361	electrode	FCV/G6, FCV/G10, FCV/G102	02637
4	102175	electrode	FCV/G10,	02638
5	102362	electrode	FCV/G101, FCV/G102, FCV/G201, FCV/G20, FCV/G202	0146803



Item	Order	Description	Model	OEM
1	693598	housing	FCV/G6, FCV/G10, FCV/G20	57382
2	693596	gasket		57402
3	693597	glass		57400

Equipment with ignition control module



Item	Order	Description	Model	OEM
1	101189	tandem valve 830	FCV/G6, FCV/G10, FCV/G101, FCV/G102, FCV/G201, FCV/G20, FCV/G202	02340
2	101984	tandem valve 836		02714
3	101379	solenoid coil		02452
4	401257	plug + rectifier		02715



Item	Order	Description	Model	OEM
1	101165	ignition control module	FCV/G6	02351
2	102347	ignition control module	FCV/G10, FCV/G101, FCV/G102, FCV/G201, FCV/G20, FCV/G202	02641
3	541075	pressure switch		03772



Item	Order	Description	Model	OEM
1	101989	valve		05757
2	101990	ignition control module	FCV/G61 (until No. 021)	05908
3	541352	pressure switch		05746



Item	Order	Description	Model	OEM
1	106007	valve	FCV/G61 (from Nr. 022), FCV/G201 (level 3), FCV/G202 (level 3)	05925
2	101184	ignition control module		05924
3	541352	pressure switch		05746



Item	Order	Description	Model	OEM
1	106008	valve		06596
2	101184	ignition control module	FCV/G201 (Level 4), FCV/G202	05924
3	541352	pressure switch		05746



Item	Order	Description	Model	OEM
1	102348	electrode		05910
2	102349	electrode	FCV/G61	05920
3	102350	electrode		05911
4	102175	electrode	FCV/G201, FCV/G202	02638
5	102362	electrode		016803



Item	Order	Description	Model	OEM
1	541078	pressure switch	universal	02635
2	601237	fan motor	FCV/G61	05745
3	601238	fan motor	all FCV-types (except G61)	02639



Item	Order	Description	Model	OEM
1	693402	insulator-boiler	all FCV-devices (except FCV/G61)	02706
2	693403	insulator-hot air fan		03874



Item	Order	Description	Model	OEM
1	106009	valve	AOS_G	0C1057
2	102346	ignition control module		0C1059



Item	Order	Description	Model	OEM
1	102351	electrode (boiler)		0C1137
2	102344	electrode (boiler)	AOS_G	0C1068
3	102352	electrode (hot air)		0C1134
4	102343	electrode (hot air)		0C1049



Item	Order	Description	Model	OEM
1	500818	fan motor	AOS061G, AOS101G	0C1051
2	500817	fan motor	AOS201G (hot air)	0C1112

Components (water)



Item	Order	Description	Model	OEM
1	370343	solenoid valve (double) with reducer	FCV/G6, FCV/G10, FCV/G20	55444
2	370346	solenoid valve (triple) with reducer	FCV/G10- -D, FCV/G20- -D	58208



Item	Order	Description	Model	OEM
1	370342	solenoid valve (double) with reducer	FCV/G10ISG	47579
2	370017	solenoid valve (single) extinction		55132



Item	Order	Description	Model	OEM
1	370347	solenoid valve, 24V (triple) with reducer	FCV/G10-P, FCV/E10-P,	A2415
2	370029	solenoid valve, 24V (single)	FCV/E20-P, FCV/E202-P	58996



Item	Order	Description	Model	OEM
1	370015	solenoid valve (single)	FCV/ 61L3-6	02613
2	370343	solenoid valve (double) with reducer	FCV/ 61L3	55444
3	370344	solenoid valve (triple) with reducer	FCV/61L4-6	02712



Item	Order	Description	Model	OEM
1	370339	solenoid valve (single) with reducer	FCV/E6, FCV/E10 (until '91), FCV/E20 (until '91)	55350
2	370343	solenoid valve (double) with reducer	FCV/E10 (from '91), FCV/E20 (from '91), FCV/E202V	55444
3	370017	solenoid valve (single)	FCV/E202V	55132



Item	Order	Description	Model	OEM
1	370017	solenoid valve (single)	ACS61_ , AOS101_ ,	55132
2	370345	solenoid valve (triple) with reducer	ACS201_ , ACS202_	02859



Item	Order	Description	Model	OEM
1	370340	solenoid valve, 24V (double) with reducer	FCV/E6-3CE	56515
2	370347	solenoid valve, 24V (triple) with reducer	FCV/E10-3CE, FCV/E20-3CE	A2415



Item	Order	Description	Model	OEM
1	370341	solenoid valve (single) with reducer	FCV/G6L3, FCV/E6L4	02753
2	370342	solenoid valve (double) with reducer	FCV/G6L3/4, FCV/G6L3/L4, FCV/G10L2, FCV/E10L2	47579
3	370345	solenoid valve (triple) with reducer	FCV/G6L4	02859, 0C1934

Cleaning



Item	Order	Description	Model	OEM
1	370348	solenoid valve, 1/2"	ACS61_ , AOS101_	07015
2	370356	solenoid valve, 3/4"	ACS201_ , AOS202_	0C1121
3	500566	magnetic-drive pump	universal	07018, 0C2341



Item	Order	Description	Model	OEM
1	370349	solenoid valve	ACS61_ ,	07016
2	370350	solenoid valve	AOS101_	07017
3	370355	solenoid valve	ACS201_ , AOS202_	0C1133, 0C1933



Item	Order	Description	Model	OEM
1	693405	holder		07009
2	532506	gasket		07074
3	693406	water pin	ACS61	07025
4	693407	bush	ACS201	07024
5	693408	wash arm	ACS202	07010
6	693409	spring		07026



Item	Order	Description	Model	OEM
1	400112	exhaust valve (electrical), 3/4"	FCV/10-P, FCV/Level6	59004, 02713
2	401140	exhaust valve (electrical), 1"	box devices, FCV/	05026
3	401139	exhaust valve (electrical) 3/4"	AOS	0C882

Components (mechanical)



Item	Order	Description	Model	OEM
1	540977	drain tap	FCV/	56114
2	514066	extension	FCV/G1, FCV/E (until '91)	56116
3	514067	extension	FCV/E (from '91)	56587



Item	Order	Description	Model	OEM
1	700081	door handle	FCV/6	56459
2	700082	door catch		56464



Item	Order	Description	Model	OEM
1	700458	door handle		02085
2	700439	spring	FCV/6	02088
3	700461	door catch		02086



Item	Order	Description	Model	OEM
1	514324	lever	FCV/	55352
2	514322	handle		29898
3	514069	lever	FCV/G6 (from 99)	02881
4	514072	lever	FCV/E6 (from 99)	02880
5	514070	lever	FCV/061	05770
6	514068	lever	FCV/10, FCV/201	02883



Item	Order	Description	Model	OEM
1	690840	door handle		56415
2	690836	gearbox	FCV/10, FCV/20	56550
3	690837	ratchet		56551
4	690838	door catch		56571



Item	Order	Description	Model	OEM
1	700446	push button		53761
2	700444	pressure pin		53756
3	700445	spring		53757
4	700450	spring		54282
5	700447	door catch	FCV/10, FCV/20	53766
6	700453	handle		55057
7	700454	protection		55059
8	700460	cap		55043



Item	Order	Description	Model	OEM
1	700462	hinge/upper	FCV/ 6	55415
2	700463	hinge/upper	FCV/_10, FCV/_20	55316
3	700464	pin	FCV/_6, FCV/_10, FCV/_20	55318
4	700465	hinge/lower		55317
5	700466	pin	FCV/_ (from '92)	59083



Item	Order	Description	Model	OEM
1	700467	catch	FCV/_6,	02647
2	690874	door handle	FCV/_10,	02717
3	700468	door catch	FCV/_61,	02650
4	700469	spring	FCV/_101,	03773



Item	Order	Description	Model	OEM
1	690874	door handle		02717
2	700470	joint support	FCV/201,	03826
3	700471	bearing	FCV/202	03994
4	700472	flange		04098



Item	Order	Description	Model	OEM
1	700488	gearbox		03824
2	690041	ratchet	FCV/201,	03822
3	700490	door catch	FCV/202	016728
4	700489	rod		05037



Item	Order	Description	Model	OEM
1	700473	hinge upper	FCV/_6,	02651
2	700474	shaft disc	FCV/_10,	02653
3	700475	hinge lower	FCV/_61,	02352
4	700469	spring	FCV/_101	03773




Item	Order	Description	Model	OEM
1	690871	hinge/upper		05041
2	700474	shaft disc	FCV/_201,	02653
3	700476	hinge/lower	FCV/_202	05694
4	700469	spring		03773



Item	Order	Description	Model	OEM
1	700477	hinge/glass side upper	FCV/_6,	02876
2	700478	gasket	FCV/_10,	02645
3	700479	plate	FCV/_61,	02877
4	700480	hinge/glass side lower	FCV/_101,	02875
5	690870	catch	FCV/_201,	04838



Item	Order	Description	Model	OEM
1	700481	door handle		06978
2	700482	catch	AOS61	06977
3	700483	door catch	AOS101	06981
4	690873	spring		06979

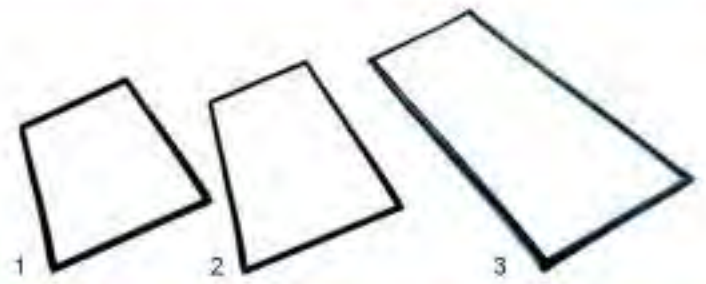 

Item	Order	Description	Model	OEM
1	900187	door seal, 585x395 mm	FCV_6	55414
2	900188	door seal, 640x720mm	FCV_10, FCV_20	55315
3	900275	door seal, 645x1380mm	FCV_202	54986



Item	Order	Description	Model	OEM
1	690866	hinge upper		06972
2	700474	shaft disc	AOS61	02653
3	690867	hinge lower	AOS101	06980
4	700484	glass plate/hinge		07007




Item	Order	Description	Model	OEM
1	900190	window seal, 190mm	FCV_6	55412
2	900191	window seal, 230mm	FCV_10, FCV_202	55314
3	900192	window seal, per meter	FCV_20	54224



Item	Order	Description	Model	OEM
1	700481	door handle		06978
2	700485	catch	AOS201	07089
3	700486	door catch	AOS202	07092



Item	Order	Description	Model	OEM
1	690868	hinge upper		07086
2	700474	shaft disc	AOS201	02653
3	700511	hinge lower	AOS202	07091
4	700484	glass plate/hinge		07007

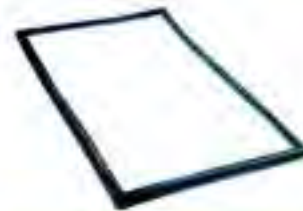 

Pos.	Order	Description	Model	OEM
1	900433	door seal, 635x430mm	FCV_6	05713, 02828
2	900162	door seal, 610x435 mm	FCV_61	05707
3	900160	door seal, 660x730mm	FCV_10, FCV_101, FCV_102	02654, 05712
4	900161	door seal, 635x1400mm	FCV_20 1/1, FCV_20 2/1	05088, 05705
5	900434	door seal, 660x1395 mm	FCV_20, FCV_201, FCV_202	03995, 05711



Pos.	Order	Description	Model	OEM
1	900185	window seal, 150mm	FCV_6, FCV_61	02837
2	900186	window seal, 200mm	FCV_10, FCV_101, FCV_102, FCV_20, FCV_201, FCV_202	02878



Pos.	Order	Description	Model	OEM
1	900278	door seal, 485x510mm	ACS061	06992
2	900268	door seal, 485x755mm	ACS101	07069
3	900276	door seal, 485x1480mm	ACS201	0C0881
4	900267	door seal, 660x1480mm	ACS202	0C1195



Item	Order	Description	Model	OEM
1	900295	hot meals trolley sealing	ACS201	0C0899
2	900274	hot meals trolley sealing	ACS202	0C1196

Stockpot stoves (gas)



Item	Order	Description	Model	OEM
1	105028	burner cover	FP/G1	26643
2	105027	burner	FP-61D	26641
3	101100	safety valve 1/2"		50106



Item	Order	Description	Model	OEM
1	100043	pilot burner		51624
2	102041	thermocouple 600mm		25031
3	101083	gas tap	FP/G1, FP/61D	25021
4	110047	knob		56016 26798

Table top cookers



Item	Order	Description	Model	OEM
1	105307	burner cover, 80 mm		20985
2	105308	Venturi	FT/G2,	20984
3	105023	burner cover, 145 mm	FT/G2V	20986
4	105022	Venturi		20954



Item	Order	Description	Model	OEM
1	100043	pilot burner		20152
2	102045	thermocouple 1500mm	FT/G2V	52814
3	101087	gas tap	(509474)	52146
4	110897	knob		54105



Item	Order	Description	Model	OEM
1	101083	gas tap	FT/G2 (253103)	25021
2	110047	knob	(2VV02B)	56016 26798



Item	Order	Description	Model	OEM
1	105236	burner cover 83 mm	FT/G2	03733
2	105235	burner	(253110)	02461
3	105237	Venturi	FOTG02T (774100)	02458



Item	Order	Description	Model	OEM
1	105242	burner cover 125	FT/G2	02441
2	105241	burner	(253110)	02463
3	105243	Venturi	FOTG02T (774100)	02460



Item	Order	Description	Model	OEM
1	105309	cover	FT/G2	03547
2	100094	pilot burner	(253110)	59214
3	102205	thermocouple 750mm	FOTG02T (774100)	58332



Item	Order	Description	Model	OEM
1	101095	gas tap	FT/G2	59460
2	110348	knob	Q253110) FOIG02T (774100)	59206

Salamander (gas)




Item	Order	Description	Model	OEM
1	416578	radiating elements		57730
2	100106	pilot burner		58329
3	100706	electrode	SL/G802	56754
4	100025	ignition cable		



Item	Order	Description	Model	OEM
1	100007	piezoelectric igniter		52539
2	102045	thermocouple, 1500mm		52814
3	101087	gas tap	SL/G802	52146
4	111599	knob		52604

 Salamander (electric)

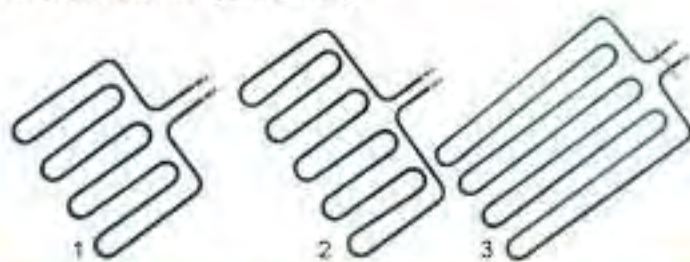

Item	Order	Description	Model	OEM
1	416579	1900 W/230 V	SL/E901, SA2-E2, E901	56783
2	416580	2000 W/230 V	SL/E851, SAL-E1, E854	56782
3	416581	3000 W/230 V	SL/E802	SL/E802



Item	Order	Description	Model	OEM
1	416653	2200 W/230 V	SE40	03016
2	416654	2200 W/230 V	SE60	03012
3	415625	1000 W/230 V	SE80	03014



Item	Order	Description	Model	OEM
1	380015	energy regulator	universal	53695
2	110898	knob	SL_	53694
3	110701	knob		03029
4	359031	signal lamp	SE40/60/80	03302
5	380204	connector	SE80	