



 
ELECTROLUX

SPARE PARTS SUITABLE FOR: SMALL APPLIANCES & SINGLE DEVICES

Spare parts suitable for small appliances and single devices



Conveyor belt toasters (electrical)

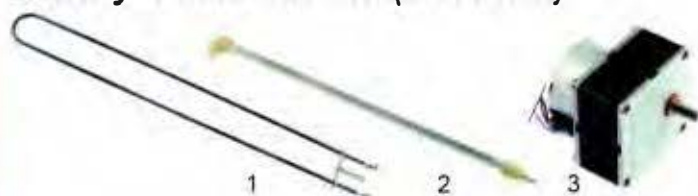

Item	Order	Description	Model	OEM
1	416860	500 W/230 V	PEK100	24407022
2	416861	290 W	PEK101	24417022
3	500605	motor	PEK100, PEK101	10130100



Item	Order	Description	Model	OEM
1	300022	switch	PEK100,	10010303
2	111540	knob	PEK101	24016101
3	359140	signal lamp/yellow	PEK100	10080004
4	359138	signal lamp/red	PEK101	10080002



Item	Order	Description	Model	OEM
1	693179	drive shaft		24403023
2	693180	toothed wheel	PEK100	24403035
3	693181	conveyor belt		24403052



Item	Order	Description	Model	OEM
1	693182	drive shaft		24413023
2	693183	toothed wheel	PEK101	24413035
3	693184	conveyor belt		24413052

Hamburger warmers/chip scuttles (electrical)




Item	Order	Description	Model	OEM
1	300022	switch		10010302
2	111540	knob	PSM1100 PMP100	24016101
3	359620	halogen lamp		10080106
4	359649	base		10081001

Roller grills (electrical)



Item	Order	Description	Model	OEM
1	416862	600 W/230 V		24307022
2	693185	pipe	PSK100	24303000
3	693186	seeger circlip ring		13130025

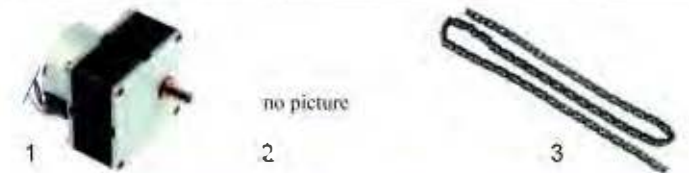 

Item	Order	Description	Model	OEM
1	500605	motor		10130100
2	693187	toothed wheel	PSK100	24303006
3	693188	chain		24303020



Item	Order	Description	Model	OEM
1	301005	switch		10010200
2	359140	signal lamp/yellow		10080004
3	380015	energy regulator	PSK100	10091000
4	111551	knob		24506020

Hot dog-machines (electrical)




Item	Order	Description	Model	OEM
1	416863	1500 W/230 V		24207022
2	490012	1500 W/230 V	PSH100	10071151
3	693189	aluminium skewer		24203001



Item	Order	Description	Model	OEM
1	693190	glass		24209022
2	693191	grid insert		24203021
3	693192	cap	PSH100	24209025
4	693193	button		13120107



Item	Order	Description	Model	OEM
1	300026	switch		10010302
2	111552	knob	PSH100	24016100
3	359140	signal lamp		10080004

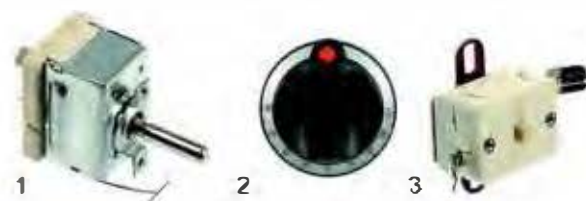 

Item	Order	Description	Model	OEM
1	375672	thermostat		10100004
2	111541	knob	PSH100	26106000
3	375673	safety thermostat		10100100


Gyros grills (gas)



Item	Order	Description	Model	OEM
1	105586	burner	PDG202	11070001
2	106013	gas tap	PDG302/3	11030602
3	111775	knob	PDG302D/3D	
4	102034	thermocouple	PDG402/3	11060004



Item	Order	Description	Model	OEM
1	105587	burner grid	PDG202	24000210
2	105588	burner grid	PDG302	24010210
3	105589	burner grid	PDG302D	24010410
4	105590	burner grid	PDG402	24020210

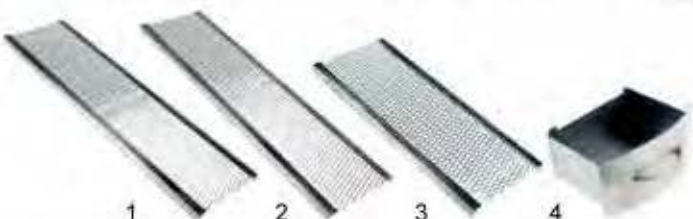 

Item	Order	Description	Model	OEM
1	105591	burner grid	PDG303	24010371
2	105592	burner grid	PDG303D	24010510
3	105593	burner grid	PDG403	24020310
4	693428	grease collecting tray	universal	24010310

Gyros grills (electrical)



Item	Order	Description	Model	OEM
1	490142	750 W/230 V		24017550
2	300022	switch	PDE300 PDE400	10010303
3	111540	knob		24016101



Item	Order	Description	Model	OEM
1	693194	glass	PDE300	24019502
2	693195	glass	PDE400	24029502

Gyros grills (mechanical)




Item	Order	Description	Model	OEM
1	500601	motor/complete	PDG202/302/402 PDE300/400	24011340
2	500607	motor/complete	PDG203/303/403	24023040




Item	Order	Description	Model	OEM
1	500608	motor		10130104
2	346400	switch	PDG_	10010207
3	550672	lamp holder outlet	PDE_	10025101

 Pizza ovens (electric)

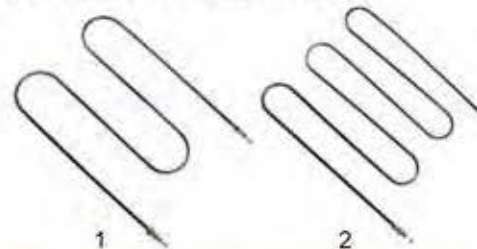

Item	Order	Description	Model	OEM
1	416865	1500 W/230 V (upper)	EMP100	22207023
2	416866	2250 W/230 V (center+lower)		22207024

 Small appliances and single devices

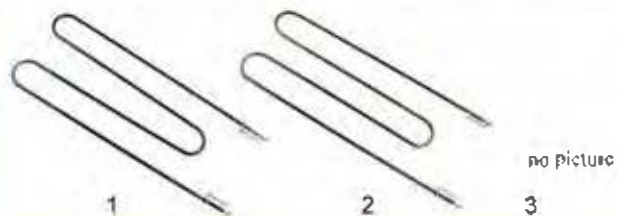

Item	Order	Description	Model	OEM
1	416867	1000 W/230 V (upper)	FPE100/110	22317026
2	416868	1500 W/230 V (lower)	FPE200/210 FPE300/310	22317025
3	416869	5 W/230 V (heating furnace)	FPE010,110 FPE210,310	22317022



Item	Order	Description	Model	OEM
1	375027	thermostat	universal	10100002
2	111542	knob	FMP100	24016106
3	111543	symbol		22206002
4	111544	knob	FPE__	22206000



Item	Order	Description	Model	OEM
1	300021	switch	universal	10010304
2	111542	knob	FMP100	24016106
3	111545	symbol		24106102
4	111546	knob	FPE__	24106100




Item	Order	Description	Model	OEM
1	301005	switch	FMP100	10010200
2	359140	signal lamp/yellow		10080004
3	359138	signal lamp/red	FMP100	10080002
4	375257	safety thermostat	FPE__	10100001
5	359712	lighting device for oven	FPE__	10080301



Item	Order	Description	Model	OEM
1	346401	switch/green	FPE__	10010112
2	346402	switch/red		10010113



Item	Order	Description	Model	OEM
1	375674	thermostat, 90°	FPE__	10100003
2	111547	knob		24106110

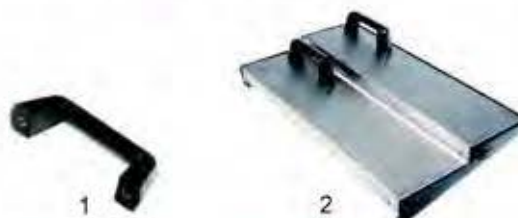 

Item	Order	Description	Model	OEM
1	693427	handle	FPE/FMP100	13120106
2	693196	door complete	FMP100	22200080



Item	Order	Description	Model	OEM
1	693197	window glass	FPE__	22319033
2	693198	door complete		22300020



Item	Order	Description	Model	OEM
1	850062	firebrick	FMP100	22209053
2	850063	firebrick	FPE__	22319052

Salamander (electric)



Item	Order	Description	Model	OEM
1	416870	1750 W/230 V		24507022
2	380015	energy regulator	PSE1100 PSE200	10091000
3	111551	knob		24506020
4	359140	signal lamp		10080004