 



Spare parts suitable for:
ROLLERGRILL



Toasters

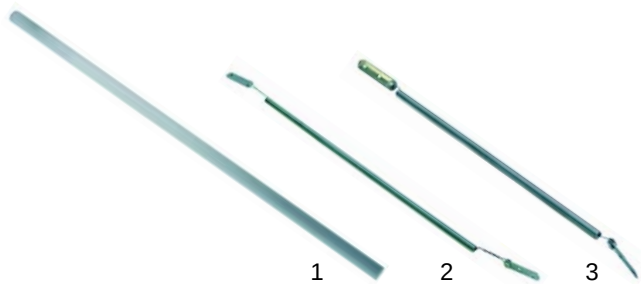

Item	Order	Description	Model	OEM
1	416760	quartz tube	BAR100/106/200/206	DO4005
2	416761	heating coil	BAR100/200	DO1003
3	416762	heating coil	BAR106/206	DO1043

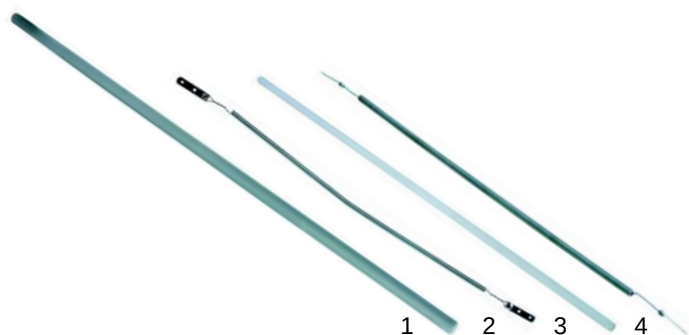 

Item	Order	Description	Model	OEM
1	416763	quartz tube	RST127,	DO4009
2	416764	heating coil	RST227	DO1035
3	416765	quartz tube	RST128,	DO4010
4	416766	heating coil	RST228	DO1036




Item	Order	Description	Model	OEM
1	300094	switch	BAR100/200,	A01001
2	360164	timer	BAR106/206,	A02008
3	110650	knob	RST127/227,	A14042
4	359900	signal lamp	RST128/228	A08005




Item	Order	Description	Model	OEM
1	693035	handle	BAR100/200, RST127/128/227/228	F01025
2	693036	handle	BAR106/206	A15033

 
Conveyor belt toasters

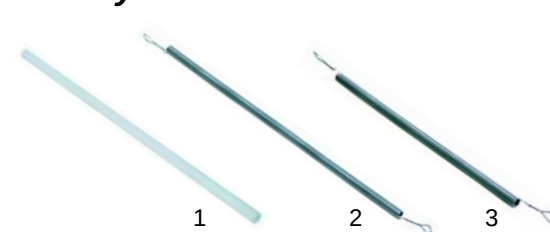

Item	Order	Description	Model	OEM
1	416709	quartz tube	CT540	DO4015
2	416714	heating (upper)		DO1040
3	416710	heating (lower)		DO1041

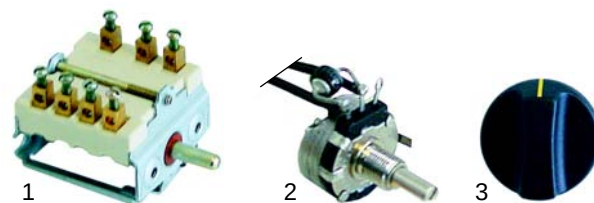 


Item	Order	Description	Model	OEM
1	300094	switch	CT540	A01001
2	300144	potentiometer		A04005
3	110651	knob		A14078

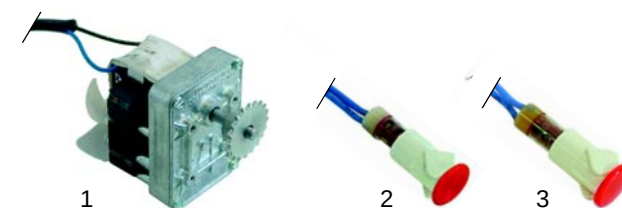 


Item	Order	Description	Model	OEM
1	500604	motor	CT540	A03036
2	359288	signal lamp		A08011
3	359900	signal lamp		A08005

 
Folding grills/waffle iron

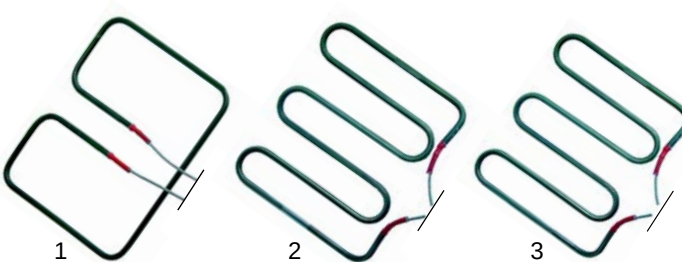


Item	Order	Description	Model	OEM
1	416722	750W/230V	GES_, GED_	D02140
2	416724	1200W/230 (lower)	Majestic	D02112
3	416723	800W/230V (upper)	Savoye	D02113

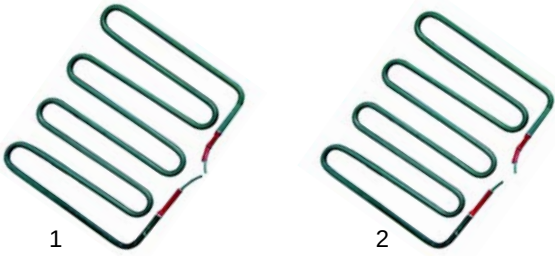 


Item	Order	Description	Model	OEM
1	416701	1800W/230V (lower)	Panini,	D02115
2	416725	1200W/230V (upper)	Double Panini	D02114

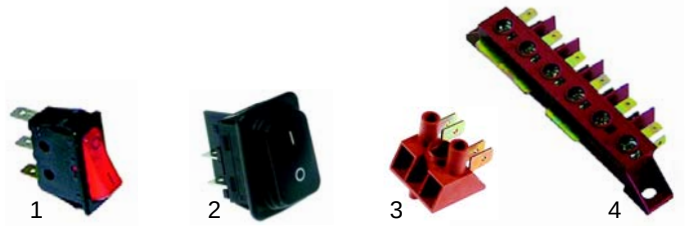 

Item	Order	Description	Model	OEM
1	301010	switch	GES_, GED_	A07012
2	301202	switch	Majestic, Savoye, Panini	A07030
3	550457	connector block, 2 pole	universal	A16012
4	550411	connector block, 6 pole		A16014

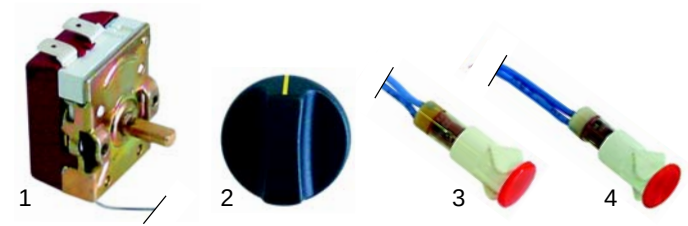 


Item	Order	Description	Model	OEM
1	375134	thermostat, 40-280°C	GES_, GED_,	A06032
2	110651	knob	Majestic, Savoye,	A14078
3	359900	signal lamp, 230V	Panini, Double	A08005
4	359288	signal lamp, 230V	Panini	A08011

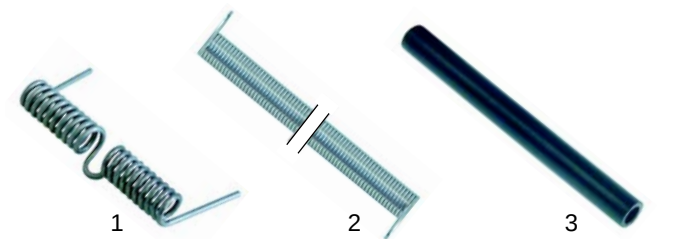 


Item	Order	Description	Model	OEM
1	693019	spring	Majestic, Panini, Double Panini, Savoye	B07015
2	693042	protection spring	universal	C04005
3	693161	handle	Majestic	A15036



Item	Order	Description	Model	OEM
1	693348	plate/upper	GES10, GED10	B02029SUO
2	693349	plate/lower		B02029INF
3	693350	plate/upper	GES20, GED20	B02028UP, B02032UP
4	693351	plate/lower		B02028INF, B02032INF

 


Item	Order	Description	Model	OEM
1	693352	plate/upper	GES30, GED30	B02030UP
2	693353	plate/lower		B02030INF
3	693354	plate/upper	GES40, GED40	B02031UP
4	693355	plate/lower		B02031INF

 

Item	Order	Description	Model	OEM
1	693356	plate/upper, plane	Panini	B02033
2	693357	plate/lower, plane		B02025
3	693358	plate/upper, fluted		B02024
4	693359	plate/lower, fluted		B02023



Item	Order	Description	Model	OEM
1	693360	plate/lower plane	Majestic	B02031
2	693363	plate/lower fluted		B02017
3	693362	plate/lower 1/2-1/2		B02022

 

Item	Order	Description	Model	OEM
1	693364	plate/upper plane	Majestic, Savoye	B02034
2	693365	plate/upper fluted		B02019
3	693366	plate/lower plane	Savoye	B02020
4	693367	plate/lower fluted		B02018


R

Fry tops (gas)




Item	Order	Description	Model	OEM
1	105505	burner		E01006
2	101491	gas tap		E02030
3	110655	knob	PSG400,	A14077
4	100984	jet 75	PSG600	E02074
4	100985	jet 85		E02075
4	100986	jet 125		E02102

 
Fry tops (electric)

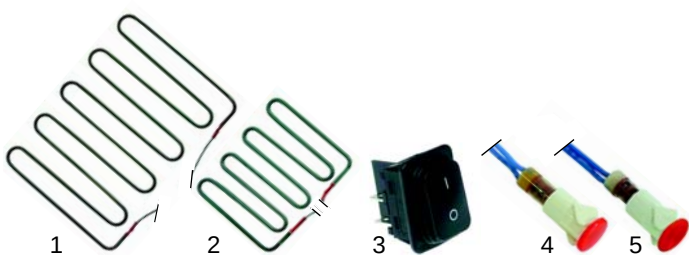

Item	Order	Description	Model	OEM
1	416748	2000 W/230 V	PSE400	D02102
2	416749	1750 W/230 V	PSE600	D02081
2	416700	3000 W/230 V	PSE600	D02141
3	301202	switch		A07030
4	359900	signal lamp, 230 V	PSE400,	A8005
5	359288	signal lamp, 230 V	PSE600	A8011

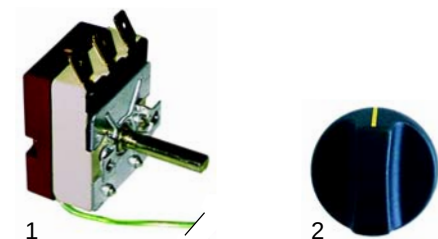 

Item	Order	Description	Model	OEM
1	375505	thermostat	PSE400,	A06003, A06042
2	110651	knob	PSE600	A14078

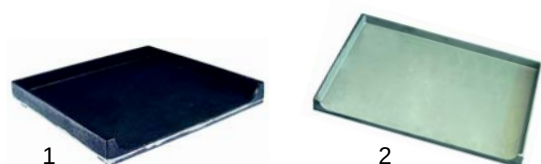 

Item	Order	Description	Model	OEM
1	693361	plate	PSG400, PSE400	B02027
2	693015	plate	PSG600, PSE600	B02026

Crepes makers (gas)




Item	Order	Description	Model	OEM
1	693021	plate 350	350G/GD	B02016
2	693020	plate 400	400G/GD, 400FG	B02015
3	105501	flame spreader	350G/GD, 400G/GD, 400FG	68009I110




Item	Order	Description	Model	OEM
1	105500	burner		E01003
2	100984	jet 75	400G	E02074
2	100985	jet 85	350GD	E02075
2	100988	jet 135	400GD	E02076
3	101094	gas tap		E02036
4	110651	knob		A14076

 Crepes makers (electric)

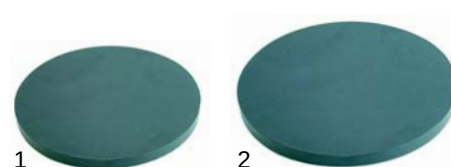


Item	Order	Description	Model	OEM
1	693021	plate 350	350E, 350GD	B02016
2	693020	plate 400	400E, 400ED, 400FE	B02015

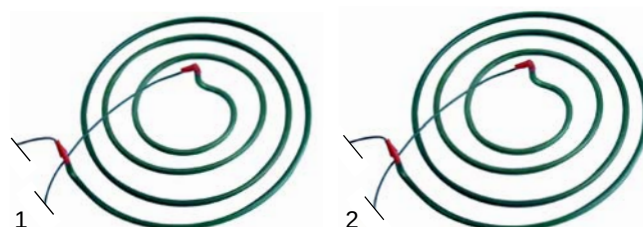 


Item	Order	Description	Model	OEM
1	416726	3000 W/230 V	350E/ED, 400E/ED	D02013
2	416771	3600 W/230 V	400FE	D02022

 Gyros grills (gas)

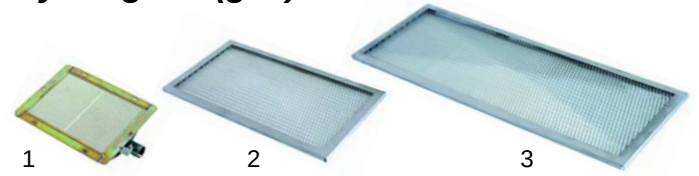


Item	Order	Description	Model	OEM
1	105509	burner	GRG40/60/80	E01005
2	105508	grid	GRG40/80	36063Grill
3	105511	grid	GRG60	36065Grill

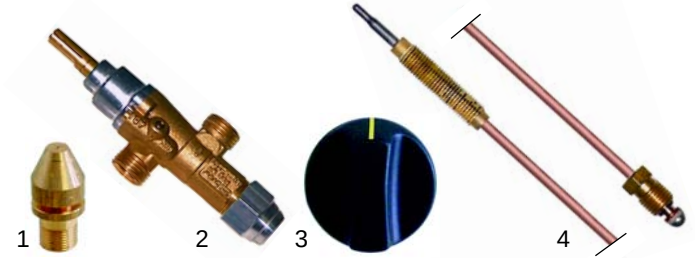 


Item	Order	Description	Model	OEM
1	105510	jet		B04011
2	101491	gas tap	GRG40, GRG60, GRG80	E02030
3	110656	knob		A14075
4	102064	thermocouple, 1000mm		E02029

 Gyros grills (electrical)

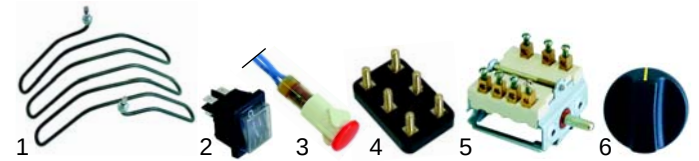


Item	Order	Description	Model	OEM
1	416704	2500W/230V		D02075
2	301200	switch		A07002
3	359900	signal lamp	GRE40, GRE60, GRE80	A08005
4	550413	terminal board		A16010
5	300094	switch		A01001
6	110651	knob		A14078

 Gyros grills (mechanical)

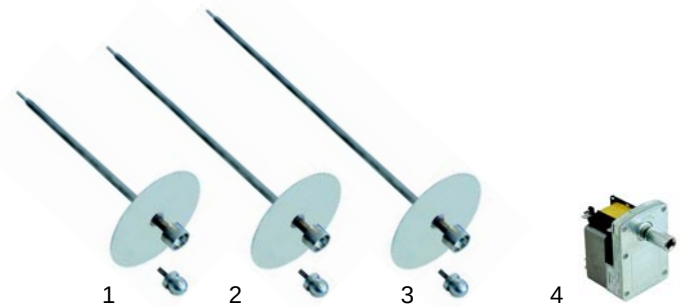


Item	Order	Description	Model	OEM
1	693008	skewer	GR_40	F03028
2	693033	skewer	GR_60	F03029
3	693034	skewer	GR_80	F03030
4	500600	motor	GR_40, GR_60, GR_80	A03025

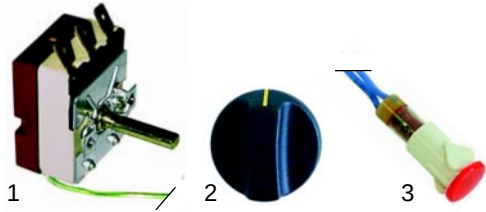 

Item	Order	Description	Model	OEM
1	375505	thermostat		A06042
2	110651	knob	350E, 350ED, 400E, 400ED, 400FE	A14078
3	359900	signal lamp, 230V		A08005

 Lava rock grills (electrical)

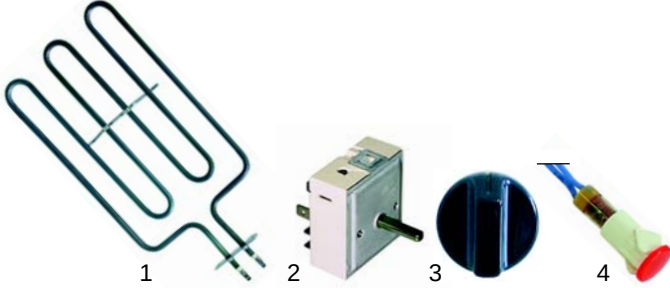


Item	Order	Description	Model	OEM
1	416772	2500W/230V		D02011
2	380015	energy regulator	140, 140D	A04006
3	110650	knob		A14042
4	359900	signal lamp		A08005

Roller grills




Item	Order	Description	Model	OEM
1	693032	CNS-pipe with impulse		B04072
2	416755	125W/230V		D02037
3	416716	steatite bush	RG5, RG7, RG9, RG11	A09003
4	693038	teflon ring		B06029
5	693031	chain		B07020
6	500603	motor		A03038

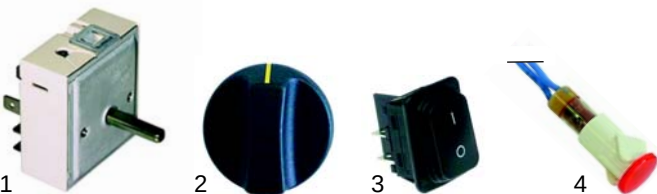 


Item	Order	Description	Model	OEM
1	380015	energy regulator		A04006
2	110651	knob	RG5, RG7, RG9, RG11	A14078
3	301202	switch		A07027
4	359900	signal lamp		A08005

 Salamander (gas)

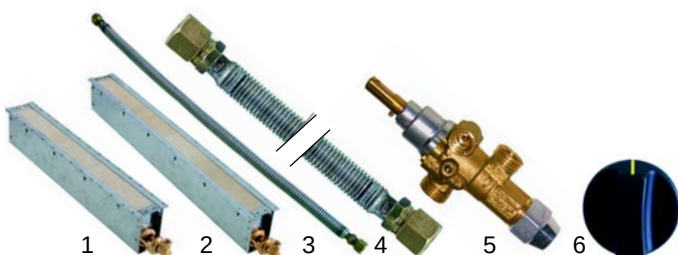


Item	Order	Description	Model	OEM
1	105507	burner	SGM60	E01001
2	105506	burner	SGF80	E01002
3	250008	gas line (CNS)	SGM60	E02087
4	105512	gas line (CNS)		E02088
5	101397	gas tap	SGM60, SGF80	E02031
6	110652	knob		A14076

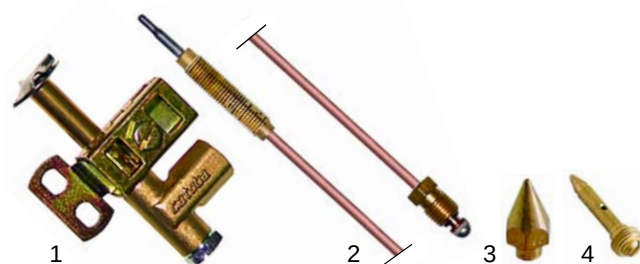 


Item	Order	Description	Model	OEM
1	100043	pilot burner		E02032
2	102064	thermocouple, 1000mm		E02029
3	100982	main jet 85		E02077
3	100983	main jet 100		E02090
3	100987	main jet 130		E02079
4	100245	pilot Venturi 0,20		E02086
5	100246	pilot Venturi 0,35		E02086

 
Salamander (electric)

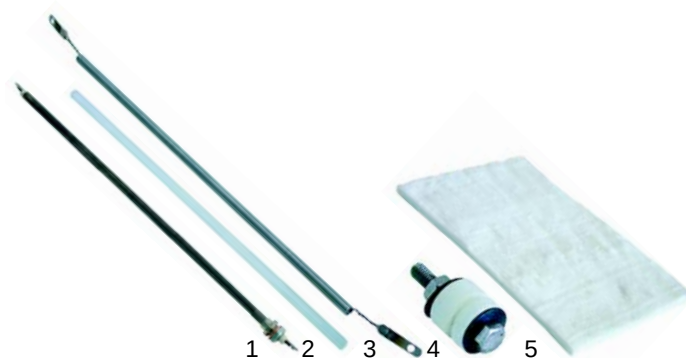

Item	Order	Description	Model	OEM
1	416756	950W/230V	SEM60	D02091
2	416715	quartz tube		D04007
3	416708	950W/230V		D01032
4	416716	steatite bush		A09003
5	693041	insulating mat, 315 x 195mm		A02002

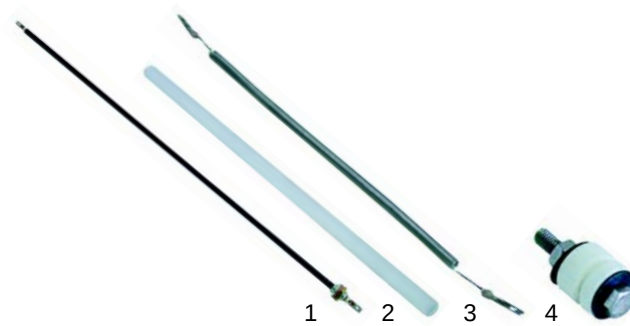 

Item	Order	Description	Model	OEM
1	416759	730W/230V	SEF80	D02092
2	416757	quartz tube		D04006
3	416758	550W/230V		D01031
4	416716	steatite bush		A09003

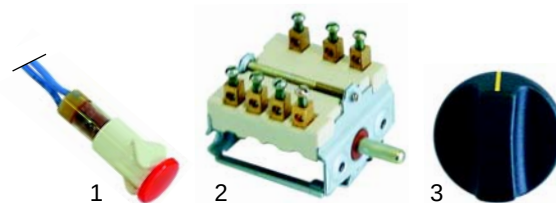 


Item	Order	Description	Model	OEM
1	359900	signal lamp	SEM60, SEF80	A08005
2	300094	selector switch		A01001
3	110651	knob		A14078

Rotisseries grill (gas)



Item	Order	Description	Model	OEM
1	105506	burner	RGB4, RGB8, RGB12	E01002
2	102041	thermocouple		E02033
3	102241	thermocouple		E02030
4	101491	gas tap		A14076
5	110652	knob		

 Rotisserie grills (electrical)

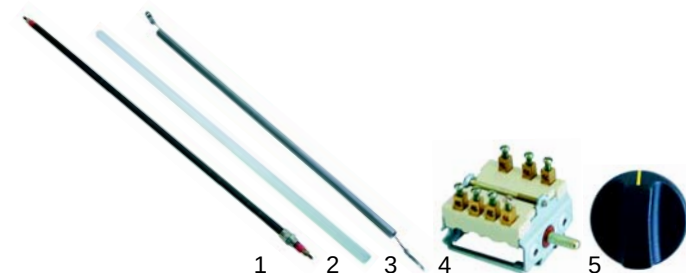


Item	Order	Description	Model	OEM
1	416702	1100W/230V	RBE4, RBE8, RBE12	D02068
2	416751	quartz tube		D04003
3	416750	1100W/230V		D01033
4	300094	selector switch		A01001
5	110651	knob		A14078


Rotisseries grill (gas/electric)




Item	Order	Description	Model	OEM
1	301200	switch	RRB_4/8/12	A07002
2	301001	switch	RGB4/8/12	A07003
3	359712	bulb + housing	RB_4/8/12	A18005
4	359900	signal lamp		A08005
5	550459	terminal board	RBE4/8/12	A16004

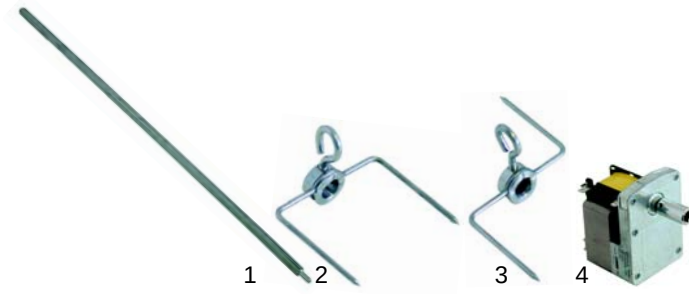 


Item	Order	Description	Model	OEM
1	693010	skewer	RBE4, RGB4,	F03019
2	693012	end clamp	RBE8, RGB8,	F03021
3	693011	ignition bracket	RBE12,	F03020
4	500601	motor	RBG12	A03008

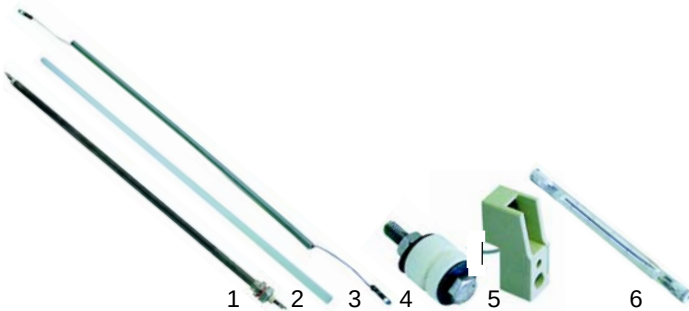 


Item	Order	Description	Model	OEM
1	416705	heating element		D02074
2	416753	quartz tube		D04011
3	416752	heating coil	RBE25	D01030
4	416716	steatite		A09003
5	359735	bulb lamp holder		A18011
6	359647	halogen lamp		A18003

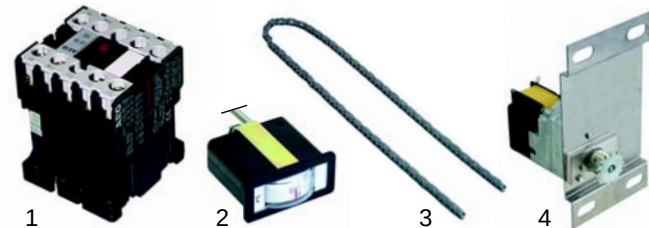 

Item	Order	Description	Model	OEM
1	380238	contactor		A05002 A05006
2	541085	thermometer	RBE25	A18007
3	693030	drive chain		B07013
4	500602	motor		A03007

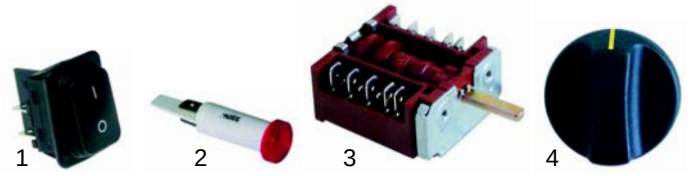 

Item	Order	Description	Model	OEM
1	301202	switch	RBE25	A07030
2	359043	signal lamp		A08008
3	345320	selector switch		A01009
4	110651	knob		A14078

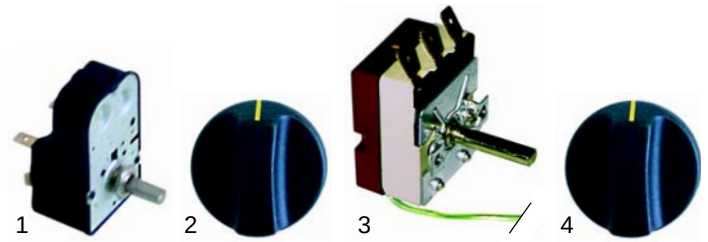 

Item	Order	Description	Model	OEM
1	350043	timer	RBE25	A02010
2	110651	knob		A14078
3	375505	thermostat		A06020, A06006
4	110651	knob		A14078


Hot-air ovens




Item	Order	Description	Model	OEM
1	416731	1500W/230V	FC26, TH1	D02052
2	416730	2500W/230V	Clasic Noir, FC33	D02143
3	416734	2500W/230V	FC34	D02086




Item	Order	Description	Model	OEM
1	416773	3000W/230V	FC60, FC60G	D02034
2	416774	5000WW/230V	FC110, FC110G	D02045

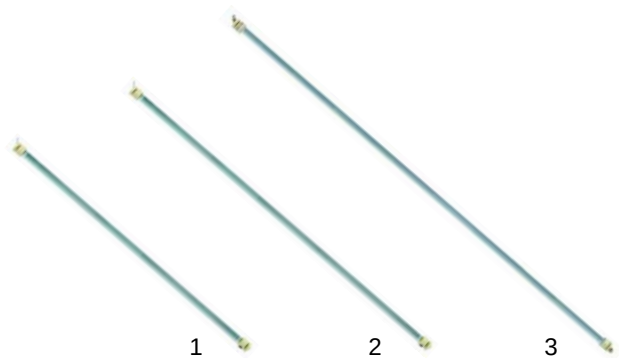 


Item	Order	Description	Model	OEM
1	416733	quartz heating element	FC33	D04001+D01037
2	416914	quartz heating element	FC60G	D04028, D4020
3	416776	quartz heating element	FC110G	D04025

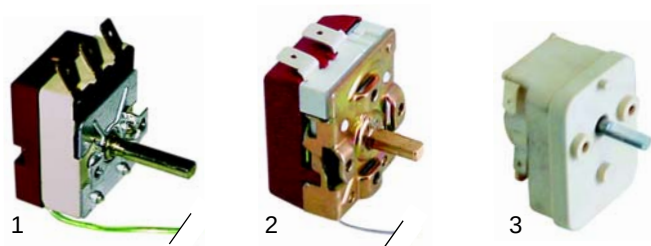 

Item	Order	Description	Model	OEM
1	375505	thermostat	FC26/33/34/60/60G/110/110G, Classic Noir	A06006, A06042
2	375155	thermostat	THA	A06019
3	360097	timer	FC26/33/34, Classic Noir	A02015

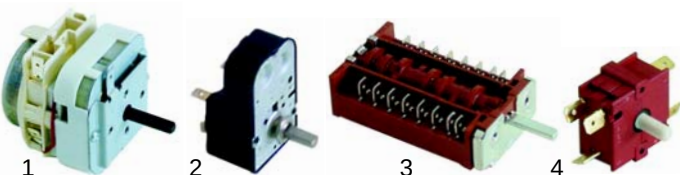 


Item	Order	Description	Model	OEM
1	360327	timer	FC60/60G, FC110/110G	A02014
2	350043	timer	TH1	A02010
3	300142	selector switch	FC60G	A01006
4	300143	selector switch	FC110G	A01014

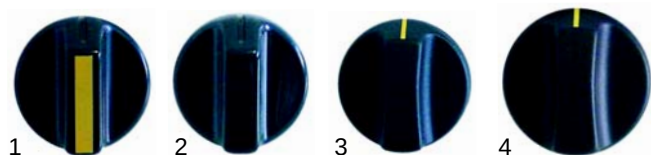 

Item	Order	Description	Model	OEM
1	110654	knob	Classic Noir	A14090
2	110650	knob	FC26	A14042
3	110651	knob	FC33/34/60/60G, FC110/110G	A14078
4	110563	knob	TH1	A14029



Item	Order	Description	Model	OEM
1	359900	signal lamp, 230 V	FC26, FC34	A08005
2	359288	signal lamp, 230 V		A08011
3	359042	signal lamp, 230 V	FC33, FC60,	A08003
4	359043	signal lamp, 230 V	FC60G, FC110,	A08008
5	359041	signal lamp, 230 V	FC110G	A08009

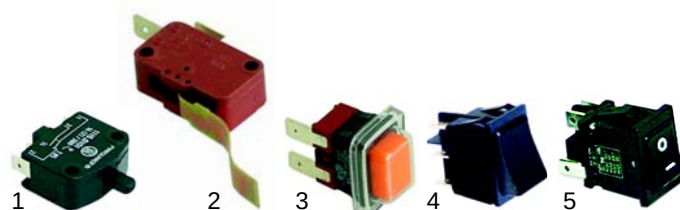 

Item	Order	Description	Model	OEM
1	345062	micro switch	FC33	A07023
2	345699	micro switch	FC110, FC110G	A07017
3	301099	switch	FC110, F110G	A07015
4	301004	switch	FC33	A07022
5	301066	switch	TH1	A07005




Item	Order	Description	Model	OEM
1	359718	bulb + housing	FC60, FC60G	A18004
2	390503	safety thermostat	FC110,	A06034
3	390504	thermostat (steam)	FC110G	A06048




Item	Order	Description	Model	OEM
1	370216	solenoid valve		B10006
2	380213	contactor	FC110, FC110G	A05008
3	550411	terminal board		A16014




Item	Order	Description	Model	OEM
1	601017	motor	FC26/33/34, TH1, Classic Noir	A03006
1	601118	fan wheel	FC60/60G	A03001
2	601122	fan	FC110/110G	A03010

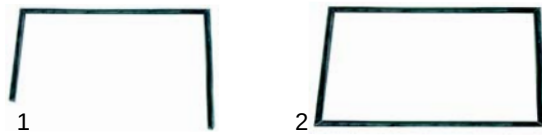 

Item	Order	Description	Model	OEM
1	900240	door seal	FC26	H03002
2	900241	door seal	FC33, Classic Noir	H03010

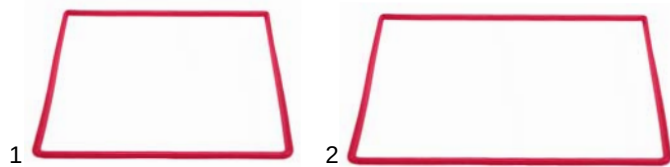 

Item	Order	Description	Model	OEM
1	900243	door seal	FC60, FC60G	H03005
2	900244	door seal	FC110, FC110G	H03006

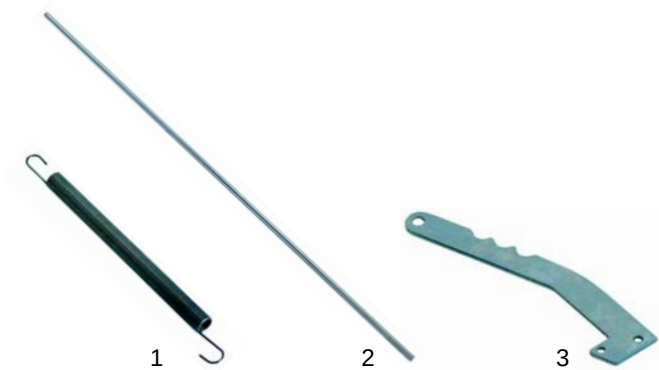 


Item	Order	Description	Model	OEM
1	693024	spring	Classic Noir, FC26, FC33, FC34	B07002
2	693043	door rod	FC26, FC34	F02005
3	693023	hinge	Classic Noir, FC33	H04096



Item	Order	Description	Model	OEM
1	693044	hinge	FC60, FC60G,	B09005
2	693045	body section	FC110, FC110G	B09007

 Pizza ovens

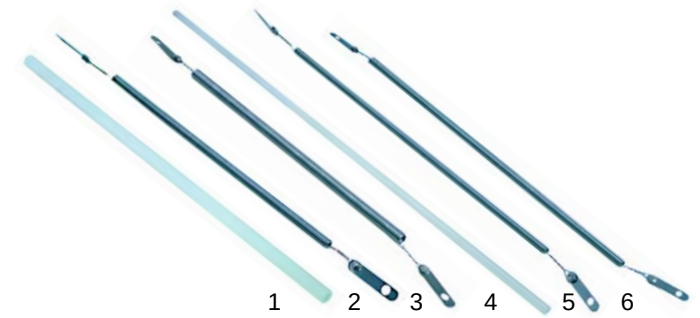


Item	Order	Description	Model	OEM
1	416707	quartz tube		D04012
2	416711	heating coil (upper)	PZ330	D01024
3	416706	heating coil (lower)		D01025
4	416736	quartz tube		D04013
5	416737	heating coil (upper)	PZ660	D01026
6	416738	heating coil (lower)		D01027




Item	Order	Description	Model	OEM
1	301010	switch		A07012
2	359900	signal lamp, 230V	PZ330, PE660	A08005
3	359288	signal lamp, 230V		A08011




Item	Order	Description	Model	OEM
1	375505	thermostat		A06042
2	110651	knob	PZ330, PE660	A14078
3	360096	timer		A02013
4	110651	knob		A14078

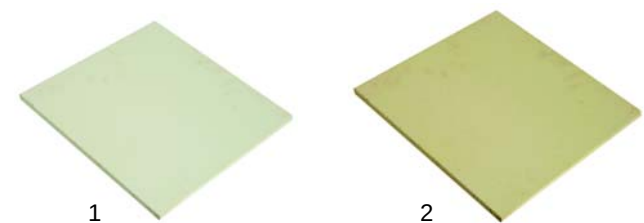 

Item	Order	Description	Model	OEM
1	693009	fireclay plate	PZ330	F07008
2	693001	fireclay plate	PZ660	F07005

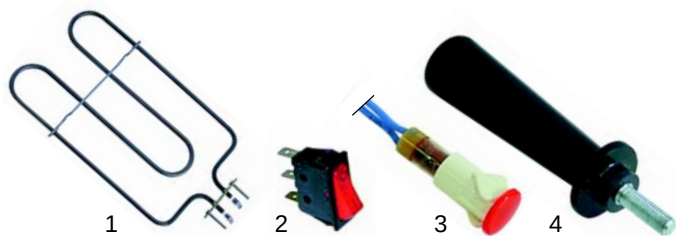 

Item	Order	Description	Model	OEM
1	416727	650 W/230 V	PZ400	D02148
2	301010	switch		A07012
3	359900	signal lamp		A08005
4	693036	handle		A15033

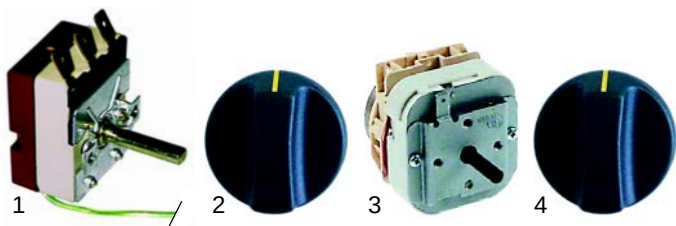 

Item	Order	Description	Model	OEM
1	375505	thermostat	PZ400	A06042
2	110651	knob		A14078
3	360098	timer		A02016
4	110651	knob		A14078

Smokers

no picture




Item	Order	Description	Model	OEM
1	416747	250 W/230 V	FM2, FM3	D02053
2	360096	timer 15'		A02001
3	110650	knob		A14042

Hot dog machines



Item	Order	Description	Model	OEM
1	416703	650 W/230 V	CS0E, CS4E, CS3E	D02001
2	416718	500 W/230 V	HD4	D02002
3	693018	aluminium skewer	CSBE, CS4E, HD4	F05010

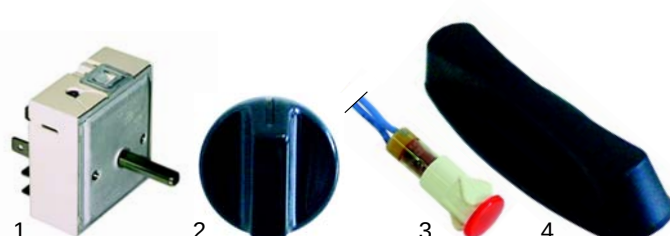 

Item	Order	Description	Model	OEM
1	380015	energy regulator	CSOE, CS3E, CS4E, HD4	A04006
2	110650	knob		A14042
3	359900	signal lamp		A08005
4	110921	handle		A15001




Item	Order	Description	Model	OEM
1	693005	tub	CS0E, CS4E, CS3E	F05022
2	693006	tub (CNS)		F05025
3	693002	glass		F05009
4	693003	plastic		F05012




Item	Order	Description	Model	OEM
1	693004	basket	CS0E, CS4E, CS3E	F04012
2	693051	lid		F05038
3	110920	button		A17001

 Heater

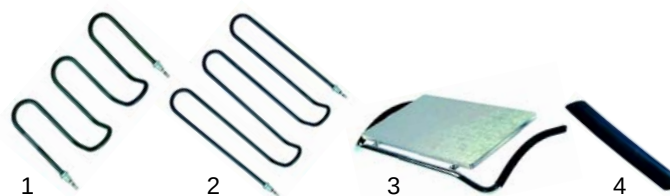


Item	Order	Description	Model	OEM
1	416717	650 W/230 V	DW106	D02004
2	416712	1300 W/230 V	DW110	D02003
3	416720	hot plate	DW10G, DW110	F03003
4	693014	insulating covering		F07009

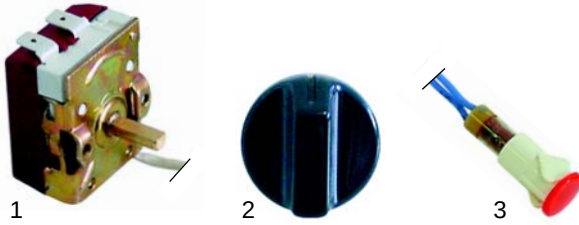 

Item	Order	Description	Model	OEM
1	375177	thermostat	DW106, DW110	A06018
2	110650	knob		A14042
3	359900	signal lamp, 230V		A08005

 Hot cupboards

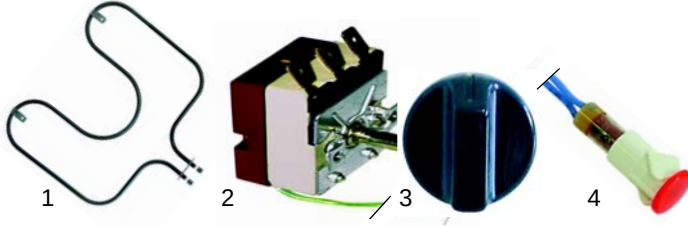


Item	Order	Description	Model	OEM
1	416719	600W/230V	Auberge relay	D02014
2	375005	thermostat		A06041
3	110650	knob		A14042
4	359900	signal lamp		A08005

Food warmers




Item	Order	Description	Model	OEM
1	416715	quartz tube	H1	D04007
2	416729	600W/230V		D01021
3	693022	steatite		A09001
4	301202	switch		A07020

 
Bains-marie

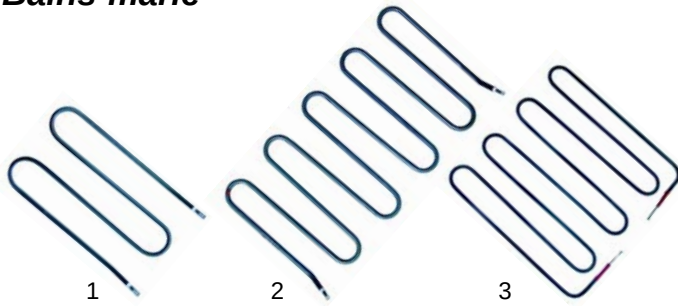

Item	Order	Description	Model	OEM
1	416777	500W/230V	BMS, BM3	D02029
2	416778	1500W/230V	BMSECO, BMGECO	D02073
3	416779	1750W/230V	BMD	D02101

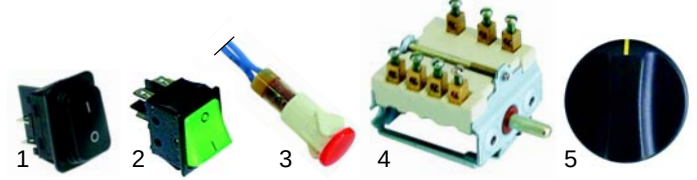 

Item	Order	Description	Model	OEM
1	301202	rocker switch	BMSECO, BMGECO	A07027
2	301003	rocker switch	BMD	A07032
3	359900	signal lamp	BMS, BM3, BMD	A08005
4	300094	selector switch	BMS, BM3	A01001
5	110653	knob		A14029

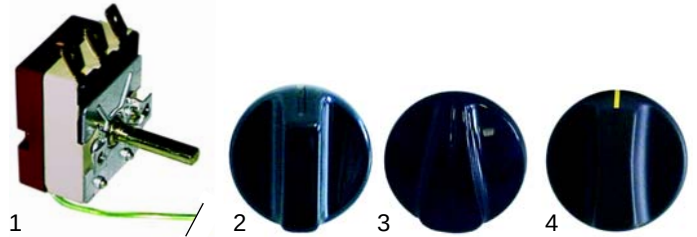 


Item	Order	Description	Model	OEM
1	375400	thermostat	BMS, BM3, BMD, BMSECO, BMGECO	A06021
2	110650	knob	BMSECO, BMGECO	A14042
3	110657	knob	BMD	A14084
4	110653	knob	BMS, BM3	A14029



Item	Order	Description	Model	OEM
1	693046	drain tap, complete	BMS, BM3	B10001
2	693040	drain tap	BMD, BMGECO	B10004

 
Pasta cookers

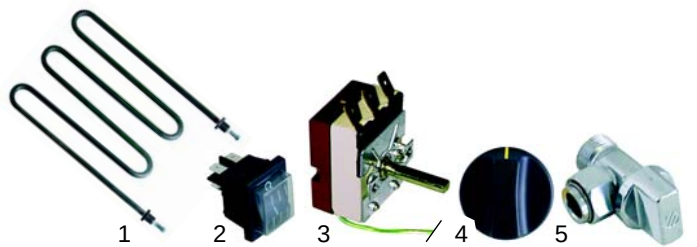

Item	Order	Description	Model	OEM
1	416728	2200W/230V	CP60	D02084
2	301200	switch		A07002
3	375505	thermostat		A06022, A06044
4	110653	knob		A14029
5	693040	drain tap		B10004

R

 
Steam cookers

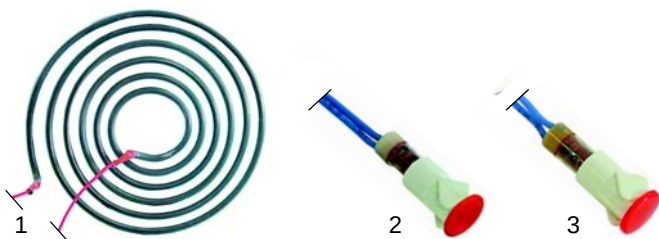

Item	Order	Description	Model	OEM
1	416780	2000 W/230 V	CV23	D02012
2	359288	signal lamp, 230 V		A08011
3	359900	signal lamp, 230 V		A08005



Item	Order	Description	Model	OEM
1	359736	lamp holder	WDL100, WDL200, V	A18014
2	359737	lamp	HC1000	A18013

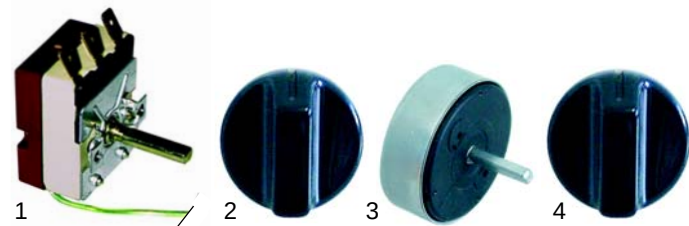 


Item	Order	Description	Model	OEM
1	375007	thermostat	CV23	A06044
2	110650	knob		A14042
3	360151	timer		A02012
4	110650	knob		A14042




Item	Order	Description	Model	OEM
1	601017	motor	VHC1000	A03006
2	416730	2500 W/230 V		D02143
3	541063	thermometer		SA18010

 Egg cookers

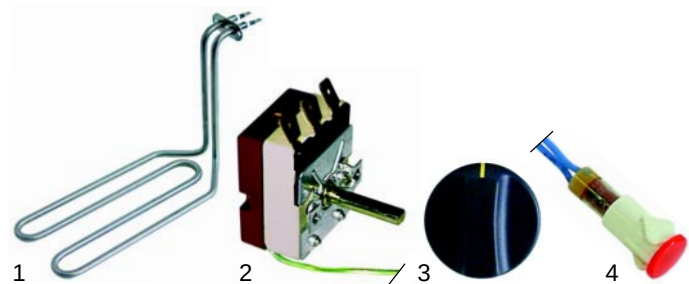


Item	Order	Description	Model	OEM
1	416744	2000 W/230 V	C06	D02010
2	375400	thermostat		A06021
3	110653	knob		A14029
4	359900	signal lamp		A08005

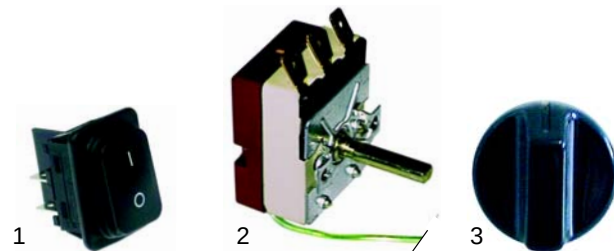 


Item	Order	Description	Model	OEM
1	301202	switch	VHC1000	A07027
2	375505	thermostat		A06042
3	110650	knob		A14042

 Hot display cabinets

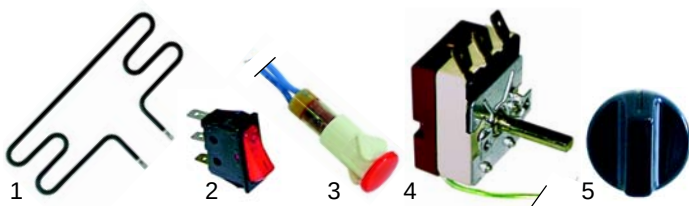


Item	Order	Description	Model	OEM
1	416703	650 W/230 V	WD100, WD200, W DL100, WDL200	D02001
2	301010	switch		A07012
3	359900	signal lamp, 230 V		A08005
4	375505	thermostat		A06041
5	110650	knob		A14042

 
Fryers

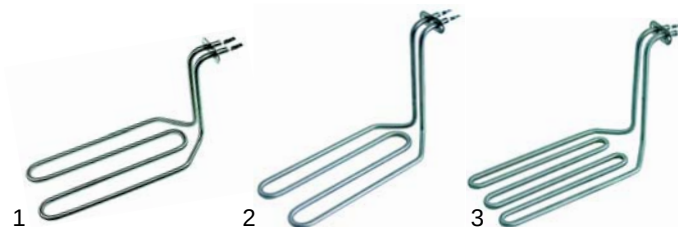


Item	Order	Description	Model	OEM
1	416743	2000 W/230 V	RF3S	D02018
2	416744	2000 W/230 V	RFS, RFDs	D02010
3	416745	2500 W/230 V	RF5SP, RFDSP	D02069

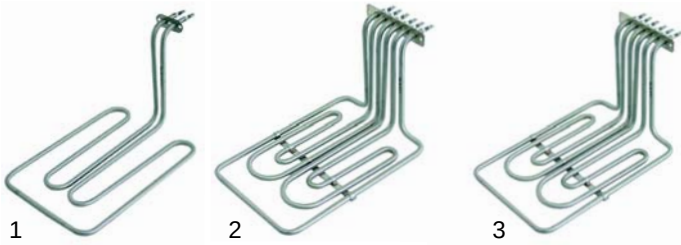 


Item	Order	Description	Model	OEM
1	416746	3000W/230V	RF8S, RF8DS	D02023
2	416740	5000W/3 x 230 V	RF5SP, RF8DSP, RF12SP	D02027
3	416739	3800W/3 x 230V	RF12S, RF12DS	D02025

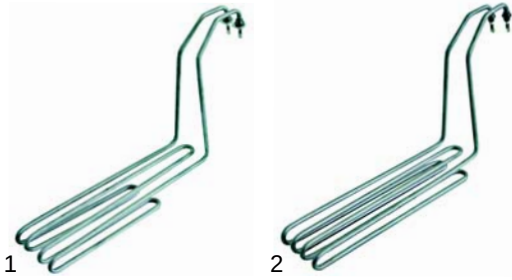 


Item	Order	Description	Model	OEM
1	416741	4000W/230V	RF14S, RF14DS	D02028
2	416742	6000W/230V		D02099

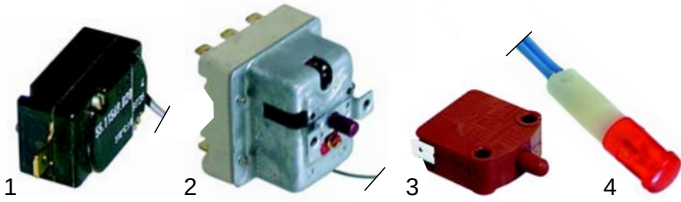 

Item	Order	Description	Model	OEM
1	375109	safety thermostat, 1-pole	RF3/5/8/12, RF14/25	A06004
2	375418	safety thermostat, 3-pole	RF8SP, RF8DSP, RF12SP, RF12DSP	A06012
3	345060	micro switch	RF_	A07011
4	359287	signal lamp		A08001

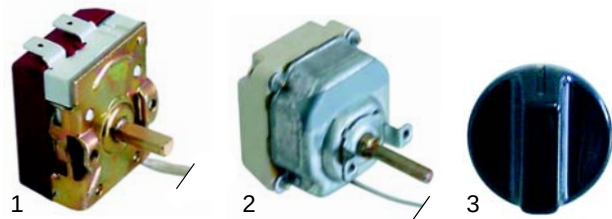 

Item	Order	Description	Model	OEM
1	375177	thermostat, 1-pole	RF3/5/8/12	A06018
2	375417	thermostat, 3-pole	RF8SP, RF8DSP, RF12SP, RF12DSP	A06005
3	110650	knob	RF3/5/8/12	A14042

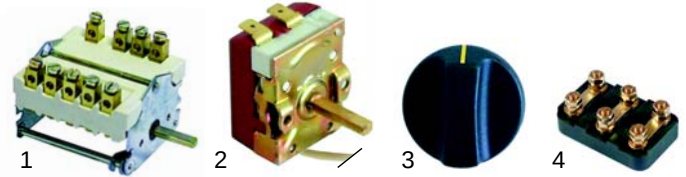 

Item	Order	Description	Model	OEM
1	300104	selector switch		A01002
2	375506	thermostat	RF14S, RF14DS, RF25S, RF25DS,	A06026
3	110651	knob		A06007
4	550459	terminal board		A14078
				A16004



Item	Order	Description	Model	OEM
1	693029	basket, 2 l	RF3_	F04002
2	693026	basket, 4 l	RF5_, RF12	F04004
3	693017	basket, 6 l	RF8_	F04006



Item	Order	Description	Model	OEM
1	693025	basket, 8 l	RF12_	F04008
2	693028	basket, 7 l	RF14_, RF25	F04017
3	693027	basket, 14 l	RF14_, RF25_	F04009



Pos.	Order	Description	Model	Vergl..-Nr.
1	110921	handle	universal	A15001

R

Suitable for Rollergrill

Hot cupboards




Item	Order	Description	Model	OEM
1	601017	motor compl.	RE2	A03006
2	416731	1500W/230V		D02043
3	541063	thermometer		A18010



Item	Order	Description	Model	OEM
1	550112	connector block	RE2	A16003
2	301202	switch		A07030
3	359647	halogen lamp		A18003
4	359043	signal lamp		A08008

 no picture

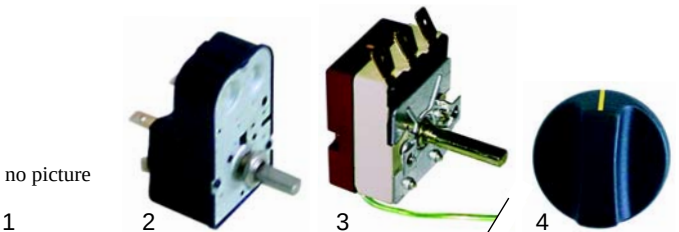

Item	Order	Description	Model	OEM
1	346374	selector switch	RE2	A01008
2	350043	timer		A02010
3	375005	thermostat		A06002
4	110651	knob		A14078