

HOME LAUNDRY AND DISHWASHERS

 
TIMERS & CONTROL UNITS

043429

TIMER ASSY.

ORIGINAL PART

Suitable For:
INDESIT DISHWASHER - DG5100

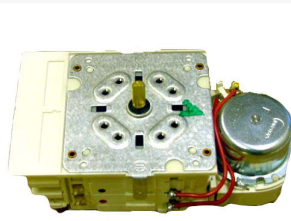


A260

TIMER 910 G3I

OEM REF: MTE010AB2

 Suitable For:
INDESIT DISHWASHER - 2111,
2114, D310, D340

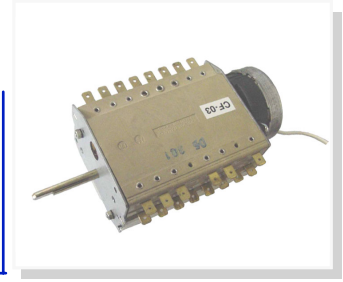


A121

TIMER EC4434.01

OEM REF: 046321

 
Suitable For:
INDESIT DISHWASHER : DG5000

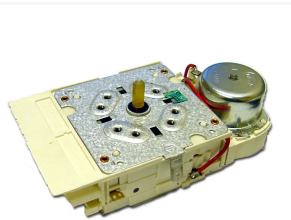

MTE016AA1

TIMER 910 P4I

 Suitable For:
INDESIT DISHWASHER - D350

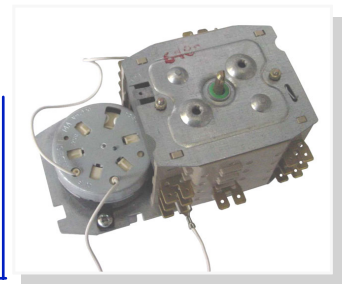


EC136

TIMER

OEM REF: 516000100

 Suitable For:
DAEWOO DISHWASHER - DD12,
KIC - D4800K

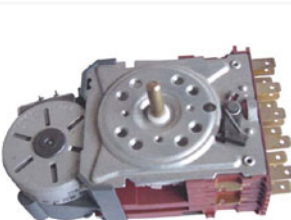

MTE015AA3

TIMER 910 P3I

Suitable For:
INDESIT DISHWASHER - D360,
UNO DUE




EC137

TIMER TYPE 1705/1/3.10

OEM REF: 516005300

 
Suitable For:
HOOVER / KIC DISHWASHER -
D5000H

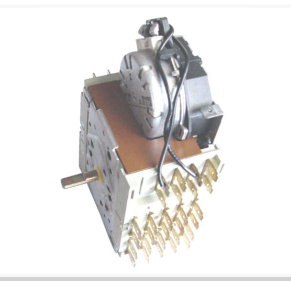

033647

TIMER EC4136

 
Suitable For:
INDESIT DISHWASHER - D3000
SERIES, D3050WI/U

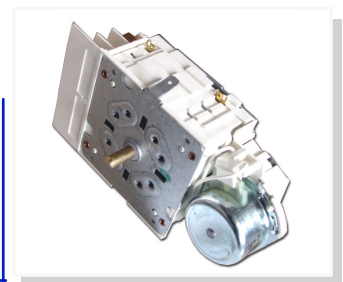

MTE017AA2

TIMER EC4138

 Suitable For:
INDESIT DISHWASHER -
D3300WU/I



4812 282 18065

TIMER EO5055

 
Suitable For:
WHIRLPOOL DISHWASHER -
ADP256, ADP556, ADP566



041132

TIMER 2003/9070


Suitable For:
INDESIT DISHWASHER -
D4000WZ

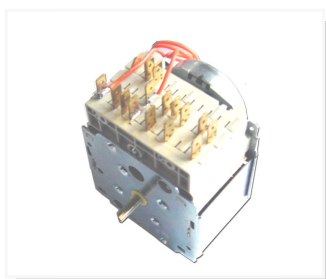

4812 214 78151

P.C.B ASSY

 
Suitable For:
WHIRLPOOL DISHWASHER -
ADP952, ADP962

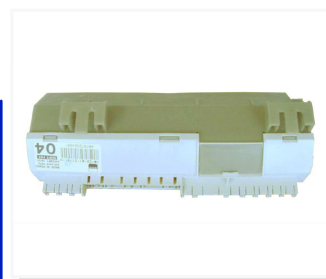

4819 282 18721

TIMER EC4649.01

 
Suitable For:
KIC DISHWASHER - KD6000;
WHIRLPOOL - ADP751

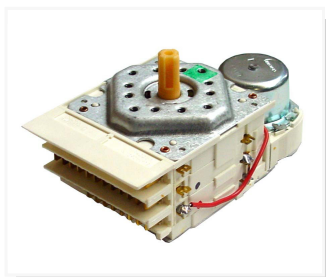

4812 214 78192

P.C.B ASSY

 Suitable For:
WHIRLPOOL DISHWASHER -
ADP952/2, ADP962/2



4819 282 18485

TIMER EO5025A

 
Suitable For:
WHIRLPOOL DISHWASHER -
ADG635W



LG-6871DD1003A

PCB ASSY

Suitable For:
LG DISHWASHER LD-2050MH

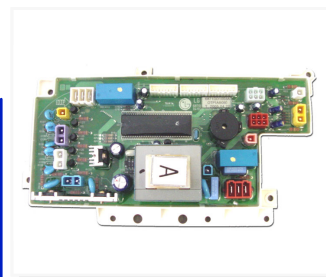

D29528

TIMER EC4687.02

Suitable For:

DEFY DISHWASHER -
DDW115/117

